

OneShot[®]

Automatic Soap System

401832 Metal
 401527 Brilliant Brass
 401528 Brushed Chrome
 401310 Chrome

Touch-Free & Trouble-Free Hand Soap System

The automatic touch-free sensor eliminates cross-contamination.

System Features


- SmartSensor™ detects user's hand to automatically dispense OneShot™ of soap.
- Red LED light blinks when refill is low.
- Yellow LED light blinks when battery life is low.
- Average battery life 100 refills or 2 years
- Reset button automatically resets low refill light and primes new soap refill.
- Optional spacer included if the sink rim is 3/4" high or greater.



Shown in chrome #401310

System Specifications

- Capacity: 800mL / 27oz. or 1600mL / 54oz.
- Bright polished chrome spout cover
- Mount through 1" (25mm) diameter hole in lavatory or countertop
- Maximum counter thickness 2" (50.8mm)
- Battery Requirements: 4 Alkaline D Cells (*not included*)
- Activation range is 4" from sensor lens
- Dispenser: #401310
Case Pack: 4 Case Weight: 10 lbs. Case Cube: 1.15
- Soap Refills: 800mL
 - #401311 - Lotion Hand Soap with Moisturizers
 - #401312 - Antibacterial Hand Soap
 - #401313 - Lotion Hand Soap
 - Case Pack: 4 Case Weight: 10 lbs. Case Cube: 1.15
- Soap Refills: 1600mL
 - #401541 - Lotion Hand Soap with Moisturizers
 - #401542 - Antibacterial Hand Soap
 - #401543 - Lotion Hand Soap
 - Case Pack: 4 Case Weight: 18 lbs. Case Cube: .50
- Optional Spacer:
(included)

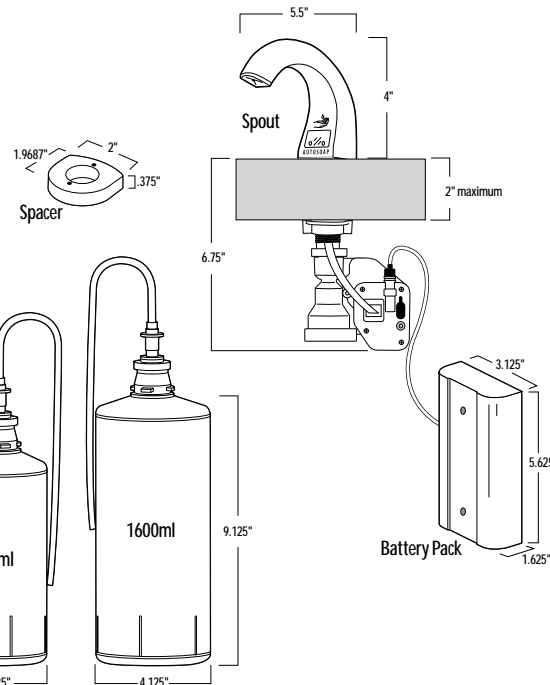

Case Pack: 4
 Case Weight: 12 lbs.
 Case Cube: 1.15

Case Pack: 4
 Case Weight: 10 lbs.
 Case Cube: 1.15



Air Delights

www.airdelights.com

P.O. Box 91424

Portland, OR 97291

Toll Free: 1-800-440-5556

Fax: 503-643-8224

OneShot® Automatic Soap System Quick Installation Instructions

1. Mount OneShot® dispenser in counter top.
2. Insure all components and wires are installed/connected properly.
3. Before installing refill, insure the tube on the refill bottle is fully inserted into the actuator/pump assembly.
4. Next, unlock pump on refill by twisting counter-clockwise. Actuator will pop up.
5. Guide refill tube up through bottom of motor assembly and up the spout.
6. Lock soap refill into place by turning clockwise a 1/4 turn.
7. **IMPORTANT** - Press the Red refill reset button. This will automatically prime the soap refill bottle.

OneShot® Automatic Soap System Frequently Asked Questions

What does the red flashing light mean?

It indicates the refill is low.

Please check fill level & change as needed.

Why is the red light still flashing after the refill has been replaced?

The RED reset button was not pressed after the new refill was installed.

Please press RED read button.

What does the yellow flashing light mean?

It indicates the batteries are low.

Change batteries if flashing, use ONLY "D" cell alkaline batteries.

How does one keep soap from dispensing when cleaning?

Place your finger over the upper right hand or left hand corner of the sensor lens.

