

OneShot®

Low Profile Automatic Soap System

402241

Chrome

Touch-Free & Trouble-Free Hand Soap System

The automatic touch-free sensor eliminates cross-contamination.

System Features

- SmartSensor™ detects user's hand to automatically dispense OneShot® of soap.
- Red LED light blinks when refill is low.
- Yellow LED light blinks when battery life is low.
 - Average battery life 100 refills or 2 years
- Reset button automatically resets low refill light and primes new soap refill.
- Optional spacer included if the sink rim is 3/4" high or greater.

System Specifications

- Capacity: 800mL / 27oz. or 1600mL / 54oz.
- Bright polished chrome spout cover
- Mount through 1" (25mm) diameter hole in lavatory or countertop
- Maximum counter thickness 2" (50.8mm)
- Battery Requirements: 4 Alkaline D Cells (*not included*)
- Activation range is 3" from sensors

Dispenser: #402241

Case Pack: 4 Case Weight: 9 lbs. Case Cube: 1.15

Soap Refills: 800mL

- #401311 - Lotion Hand Soap with Moisturizers
- #401312 - Antibacterial Hand Soap
- #401313 - Pure & Natural® Hand Soap


Case Pack: 4 Case Weight: 9 lbs. Case Cube: .33

Soap Refills: 1600mL

- #401541 - Lotion Hand Soap with Moisturizers
- #401542 - Antibacterial Hand Soap
- #401543 - Pure & Natural® Hand Soap

Case Pack: 4 Case Weight: 18 lbs. Case Cube: .50

- Optional Spacer: (included)

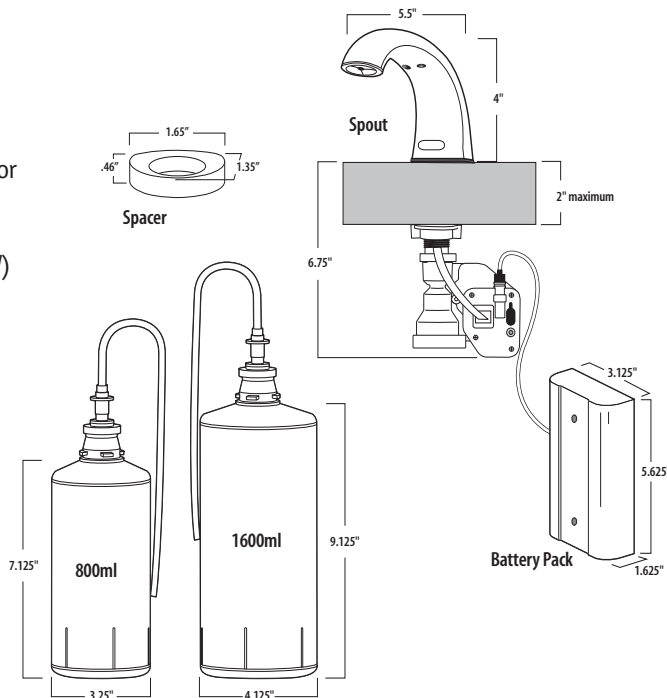

Case Pack: 4
Case Weight: 9 lbs.
Case Cube: 1.15



Air Delights, Inc.

9974 SW Arctic Dr., Beaverton, OR. 97005

Fax 1-503-643-8224

Local# 1-503-352-1201

Phone Toll Free 1-800-440-5556

www.AirDelights.com

OneShot® Low Profile Automatic Soap System Quick Installation Instructions

1. Mount OneShot® Low Profile dispenser in counter top.
2. Insure all components and wires are installed/connected properly.
3. Before installing refill, insure the tube on the refill bottle is fully inserted into the actuator/pump assembly.
4. Next, unlock pump on refill by twisting counter-clockwise. Actuator will pop up.
5. Guide refill tube up through bottom of motor assembly and up the spout.
6. Lock soap refill into place by turning clockwise a 1/4 turn.
7. **IMPORTANT - Press the Red refill reset button. This will automatically prime the soap refill bottle.**

OneShot® Low Profile Automatic Soap System Frequently Asked Questions

What does the red flashing light mean?

It indicates the refill is low.

Please check fill level & change as needed.

Why is the red light still flashing after the refill has been replaced?

The RED reset button was not pressed after the new refill was installed.

Please press RED read button.

What does the yellow flashing light mean?

It indicates the batteries are low.

Change batteries if flashing, use ONLY "D" cell alkaline batteries.