


PIEXO AIR FRESHENER

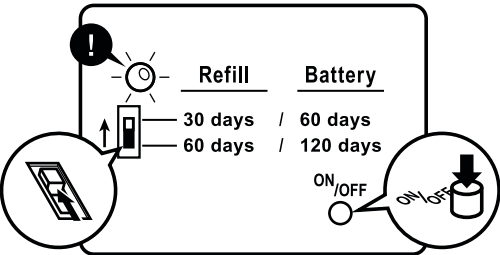


Standard Settings (4) AA

Replace refill in 30 days, batteries in 60




Standard Settings (4) C

Replace refill in 60 days, batteries in 120

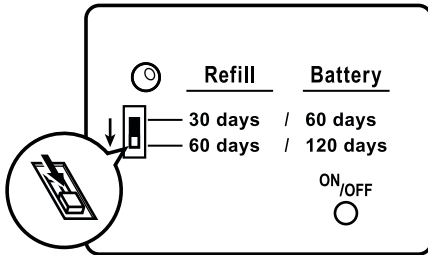


Standard Settings (4) C

Replace refill in 60 days, batteries in 120

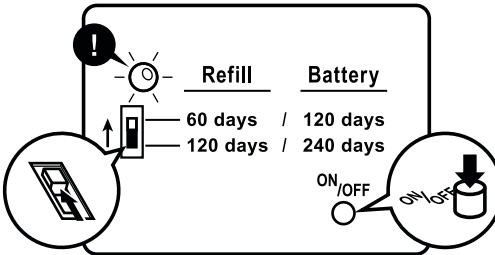


Standard Settings (4) C

Replace refill in 120 days, batteries in 240

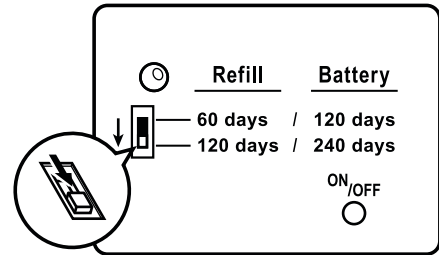


Program Settings


1. Set Day & Clock

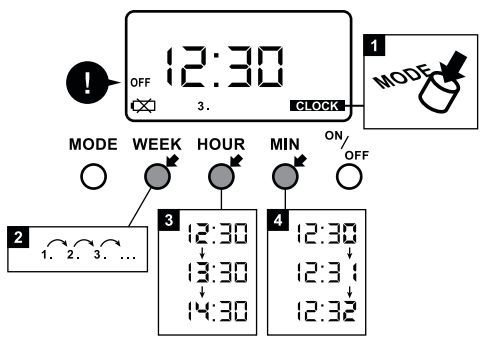


2. Spray Start Time

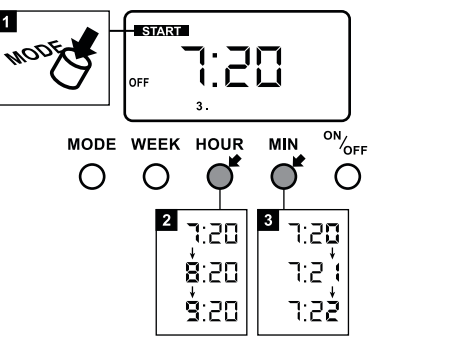


3. Spray End Time

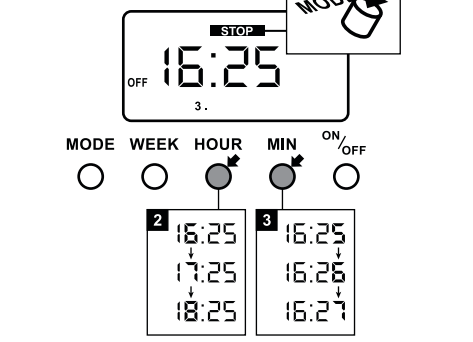


4. Spray Interval

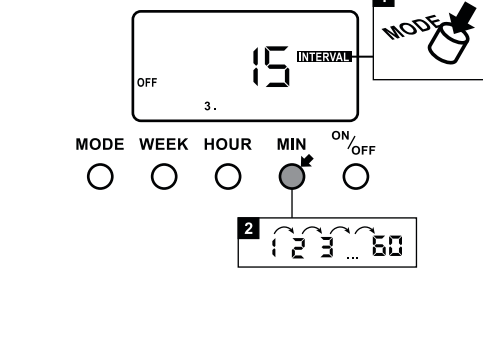


5. Days Per Week

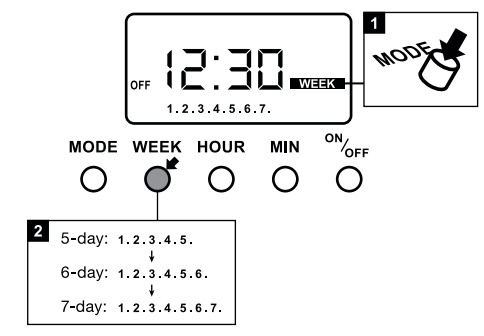

6. Program On

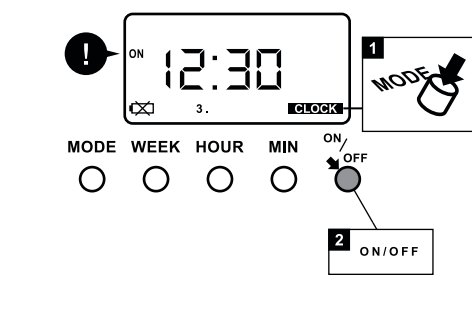


Check Spray History

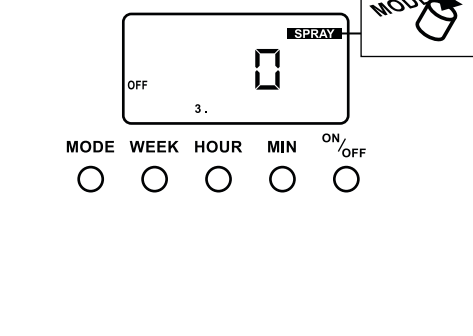


PIEXO AIR FRESHENER


Installation Instructions

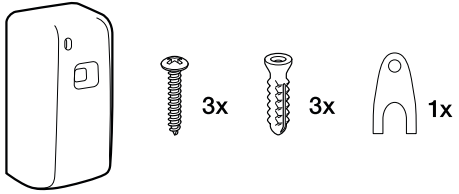


Recommended Installation Height

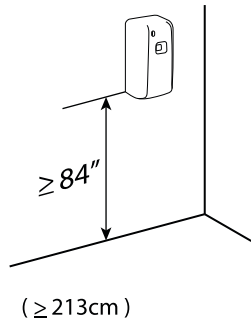


Open Dispenser

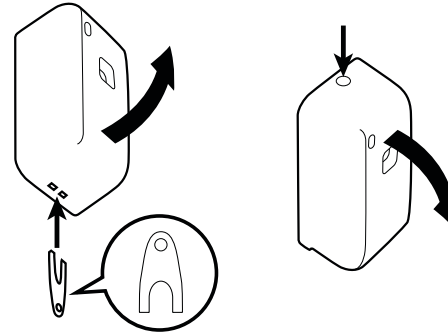


Light Indicator

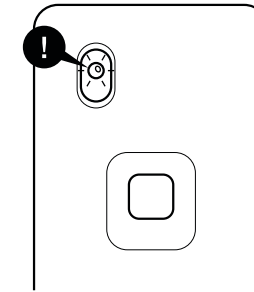


Operating: blinking green

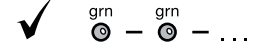



Bottle Empty: blinking red

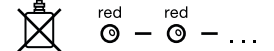


Battery Low: no light

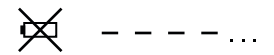


Installation with Screws

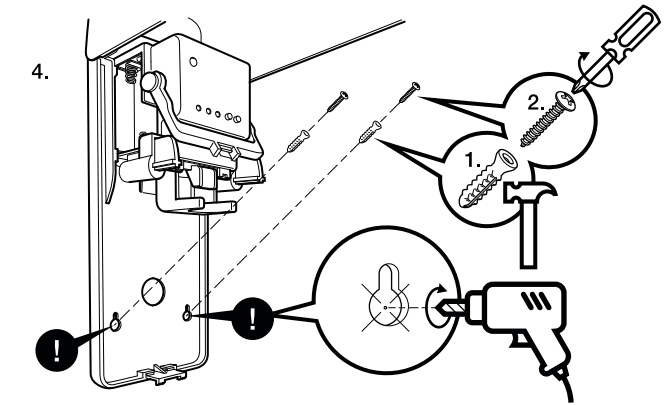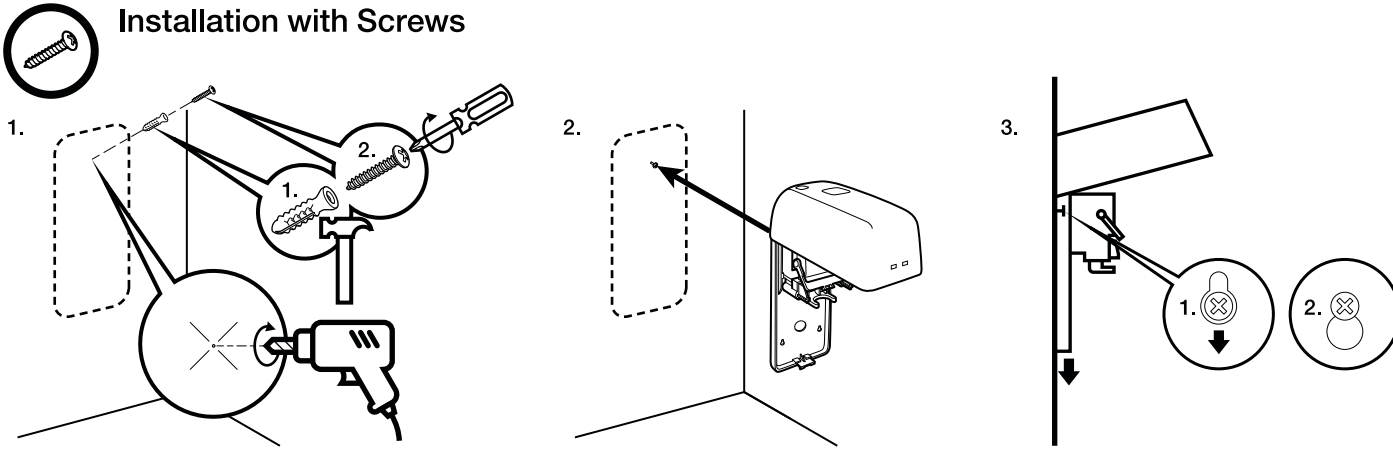

Install w/ Adhesive Backing (no screws)

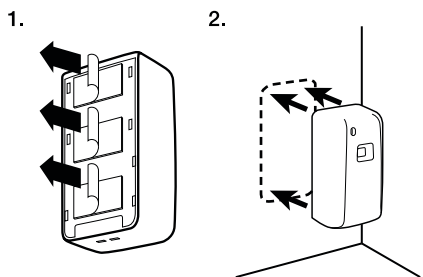

Install Cartridge

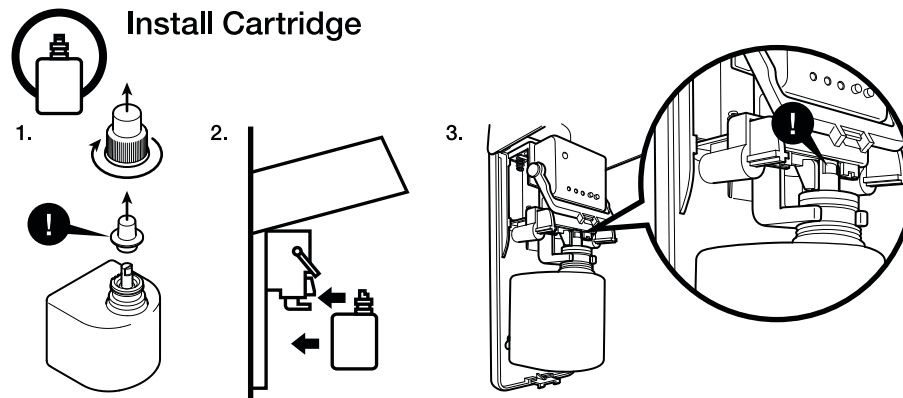

Install Batteries

