



Installation and Maintenance Instructions

Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

*T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690*

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-005241-45 Rev 5
Date: 01-14-15
Drawn: TEH
Checked: JRM 01-26-15
Approved: JHB 01-26-15




BASE FAUCET ASSEMBLY

Deutsch: Installations- und Wartungsanleitungen

Español: la Instalación y las Instrucciones de Mantenimiento

Français: les Instructions d'Installation et d'Entretien

Exploded View

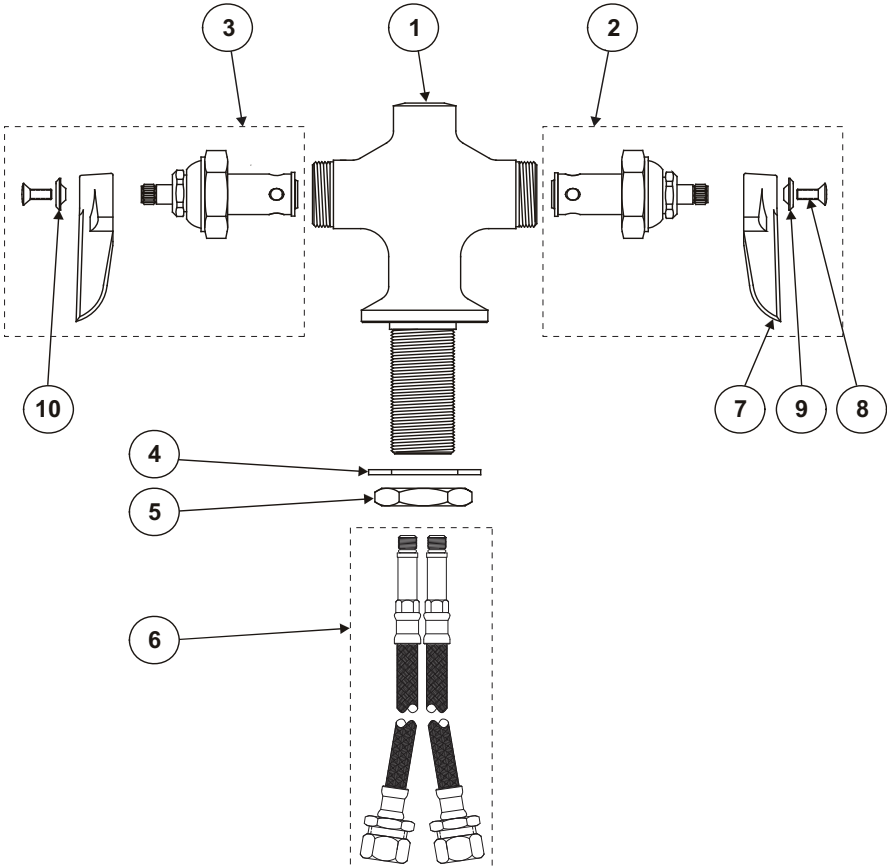

Part Number Guide


Base Faucet Assembly

1	Base Faucet	N/A
2	Asm, Spindle LH - Eterna with Spring Checks	002711-40
	Asm, Spindle LH - Eterna	002713-40
3	Asm, Spindle RH - Eterna with Spring Checks	002712-40
	Asm, Spindle RH - Eterna	002714-40
4	Washer, Body	002290-45
5	Locknut, Shank	000965-45
6	Flexible Connector Hoses	012534-45
7	Lever Handle (Blank)	001638-45
8	Screw, Lever Handle	000922-45
9	Index, Button - Blue	001660-45
10	Index, Button - Red	001661-45


General Instructions

Faucet Installation:

1. Shut off water supply and drain lines. Drill a hole approximately 1-1/2" diameter in countertop where you are installing no.1.
2. Remove no.5 and no.4 from no.1.
3. Place no.1 through hole in sink, align hot and cold sides parallel to sink line.

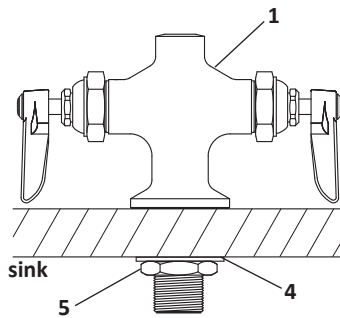

4. Install no.4 and no.5 on no.1, tighten no.5.
5. Install no.6 into threaded holes of no.5. Tighten by hand.

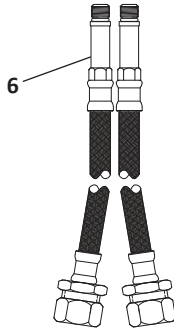


6. Connect supply lines and check for leaks.


Instrucciones Generales

Instalación de la canilla:

1. Cierre el suministro de agua y líneas de drenaje. Perfore un agujero de aproximadamente 3,81 cm de diámetro en el mostrador donde va a instalar el no. 1.
2. Remueva el no. 5 y el no. 4 del no. 1.
3. Coloque el no. 1 entre al agujero en el fregadero, alinee los lados calientes y fríos paralelo a la línea del fregadero.

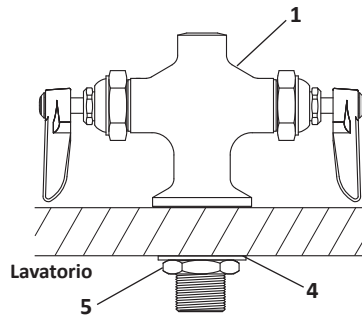

4. Instale el no. 4 y el no. 5 en el no. 1; cierre el no. 5.
5. Instale el no. 6 entre los agujeros roscados del no. 5. Apriete por mano.

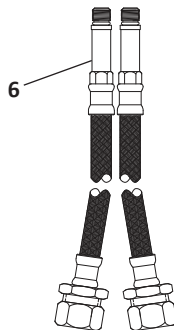


6. Conecte las líneas de suministro y revisa por fugas.


Instructions Générales

Installation du Robinet:

1. Fermez l'arrivée d'eau et vidanger les tuyauteries. Percez un trou d'environ 3,81 cm de diamètre dans le comptoir où vous installez le No. 1.
2. Retirez le No.5. et No.4. du No.1.
3. Placez le No.1. dans le trou de l'évier, alignez les cotés chauds et froids parallèles à la ligne de l'évier.

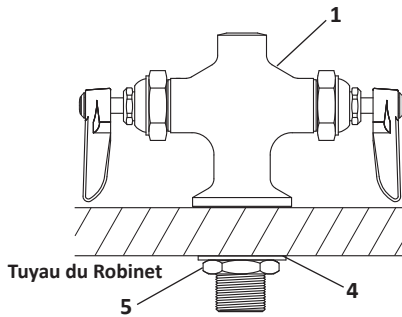

4. Installez le No.4. et No.5. sur No.1., serrez le No.5.
5. Installez le No.6. dans les trous filetés du No. 5. Serrez à la main.

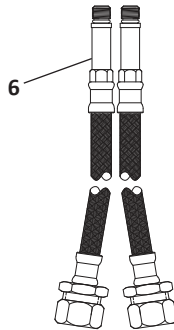


6. Raccordez les conduites d'alimentation et vérifiez qu'il n'y ai aucune fuite.


Allgemeine Anleitungen

Wasserhahn Installation:

1. Wasserzufuhr ausschalten und Rohre entleeren. An der Stelle in der Arbeitsfläche, wo Nr. 1 installiert werden soll, wird eine Öffnung mit einem Durchmesser von 3,81 cm gebohrt.
2. Nr. 5 und Nr. 4 von Nr. 1 entfernen.
3. Nr. 1 durch die Öffnung im Becken einführen und Heiß- und Kaltwasserleitungen parallel zur Beckenleitung ausrichten.

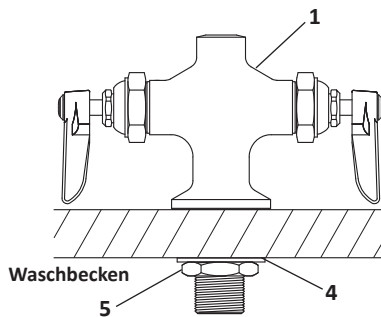

4. Nr. 4 und Nr. 5 an Nr. 1 installieren. Nr. 5 festziehen.
5. Nr. 6 in den Gewindeöffnungen von Nr. 5 installieren. Von Hand festziehen.

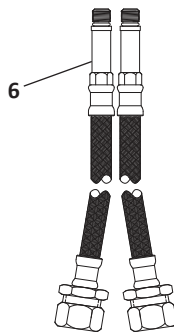

6. Wasserleitungen erneut anschließen und auf undichte Stellen prüfen.

RELATED T&S BRASS PRODUCT LINE



**B-20K
Parts Kit**



**B-0220-LN
Deck Mixing
Faucet**

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102

Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'

Oude Nieuwveenseweg 84

2441 CW Nieuwveen

The Netherlands



RELIABILITY BUILT IN™



Installation and Maintenance Instructions

Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

*T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690*

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.


P/N: 098-011027-45 Rev.9
Date: 03-22-12
Drawn: TEH
Checked: JRM 03-26-12
Approved: JHB 03-27-12



Pre-Rinse Spray Valve

- | | |
|-----------------|------------------|
| B-0107 | UK-0107 |
| B-0107-C | UK-10K |
| B-0107-J | EB-0107 |
| B-10K | EB-0107-C |
| B-10K-C | EB-0107-J |
| B-10K-J | EB-10K |
| | EB-10K-C |
| | EB-10K-J |

Exploded View

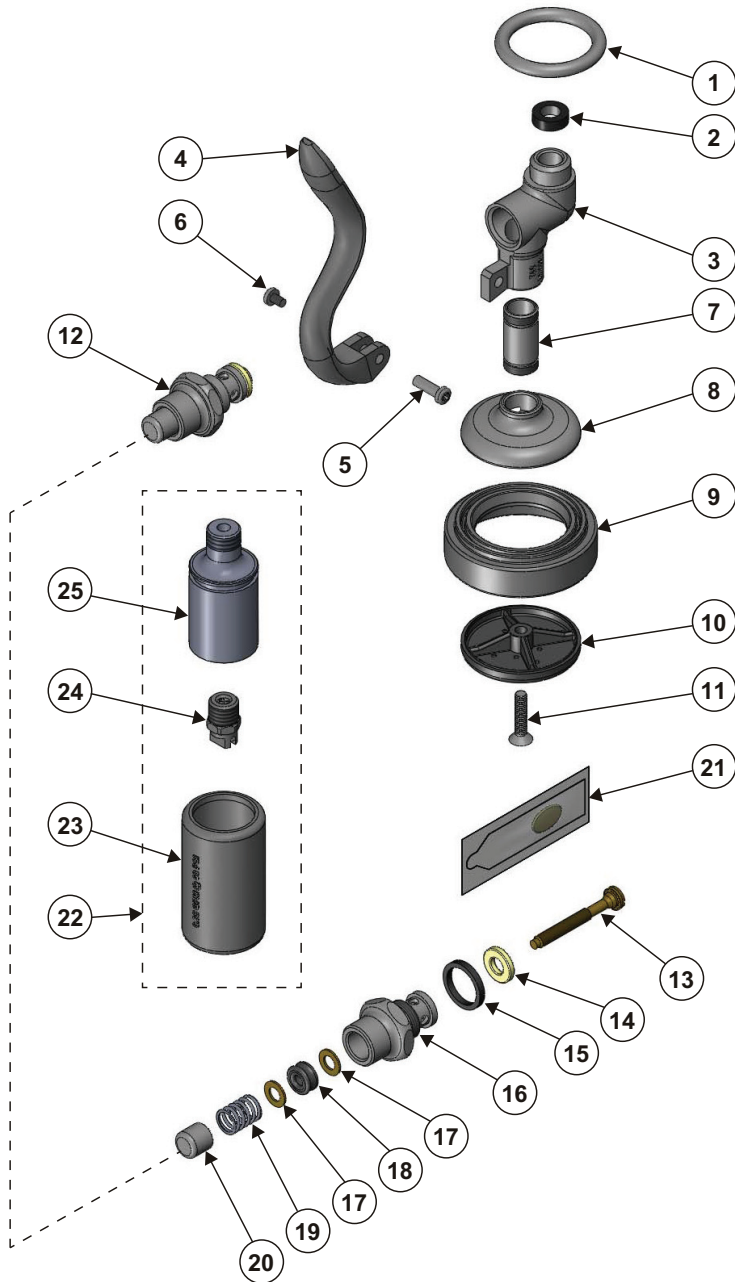

Grey Part Number Guide

PARTS KIT

PARTS FOR ANY GREY T&S SPRAY VALVE

1,2,3	1	Ring, Hold Down	000907-45
	2	#27 Washer	010476-45
	3	Body, Spray Valve	000065-40
	4	Grey Handle	001120-45
	5	Nut, Handle	003198-45
	6	Screw, Handle	003199-45

PARTS FOR ANY GREY BONNET ASSEMBLY

1,2,3	12	Bonnet Assembly	002856-40
	13	Stem	009306-20
1,2,3	14	Washer, Seat	012915-45
1,2,3	15	Washer, Bonnet Binding	001040-45
1,2,3	16	Bonnet	000608-25
	17	Washer, Bonnet Brass	000974-45
1,2,3	18	Stem, Packing	001100-45
1,2,3	19	Spring, Bonnet	000895-45
1,2,3	20	Push Button	000753-25
	21	Grease Pack	012665-45

GREY SPRAY VALVES

B-0107 (1.42 GPM)			
1	7	Nipple	000694-40
	8	Cup, Spray	000019-40
	9	Ring, Sprayhead	007861-45
	10	1.42 GPM Sprayface	001121-45
1	11	Screw, Sprayface	000913-45
B-0107-C (0.65 GPM)			
2	22	Assembly, B-0107C Spray Nozzle	002662-40
	23	0.65 GPM Grey Shield (No Outline Around Lettering)	002659-45
	24	0.65 GPM Spray Nozzle (0.65 Stamped on Face)	N/A
B-0107-J (1.07 GPM)			
3	22	Assembly, B-0107-J Spray Nozzle	N/A
	23	1.07 GPM Grey Shield (Square Outline)	018292-45
	24	1.07 GPM Spray Nozzle (1.07 Stamped on Face)	N/A
	25	Nozzle Holder	N/A

#1 Parts included in B-10K

#2 Parts included in B-10K-C

#3 Parts included in B-10K-J

Blue Part Number Guide

PARTS KIT

PARTS FOR ANY BLUE T&S SPRAY VALVE

4,5,6,7	1	Ring, Hold Down	000907-45
	2	#27 Washer	010476-45
	3	Body, Spray Valve	000065-40
	4	Blue Handle	011454-45
	5	Nut, Handle	003198-45
	6	Screw, Handle	003199-45

PARTS FOR ANY BLUE BONNET ASSEMBLY

4,5,6,7	12	Bonnet Assembly	010594-40
	13	Stem	009306-20
	14	Washer, Seat	010563-45
	15	Washer, Bonnet Binding	010565-45
	16	Bonnet	000608-25
	17	Washer, Bonnet Brass	000974-45
	18	Quad Seal	014615-45
	19	Spring, Bonnet	000895-45
	20	Push Button	000753-25
	21	Grease Pack	010573-45

BLUE SPRAY VALVES

EB-0107 & UK-0107 Only			
4,7	7	Nipple	000694-40
	8	Cup, Spray	000019-40
	9	Ring, Sprayhead	011475-45
	11	Screw, Sprayface	000913-45
4	10	4-6 GPM Sprayface (No Wording on Face)	011456-45
	10	1.42 GPM Sprayface (Flow Rate on Face)	017288-45
5	22	Assembly, EB-0107C Spray Nozzle	N/A
	23	0.65 GPM Blue Shield (No Outline Around Lettering)	011499-45
	24	0.65 GPM Spray Nozzle (0.65 Stamped on Face)	N/A
	24	0.65 GPM Spray Nozzle (0.65 Stamped on Face)	N/A
6	22	Assembly, EB-0107-J Spray Nozzle	N/A
	23	1.07 GPM Blue Shield (Square Outline)	018293-45
	24	1.07 GPM Spray Nozzle (1.07 Stamped on Face)	N/A
	24	1.07 GPM Spray Nozzle (1.07 Stamped on Face)	N/A
	25	Nozzle Holder	N/A

#4 Parts included in EB-10K

#5 Parts included in EB-10K-C


#6 Parts included in EB-10K-J

#7 Parts included in UK-10K


General Instructions

To replace worn parts:

1. Shut off water supply and drain lines. For ease of disassembly and reassembly, the *handle grip* can be removed from no.3.
2. Unscrew no.5 and no.6 to remove no.4. Unscrew and remove no.16 from no.3.
3. Hold no.20 with pliers in one hand, and with screwdriver, carefully unscrew no.13 from no.16.

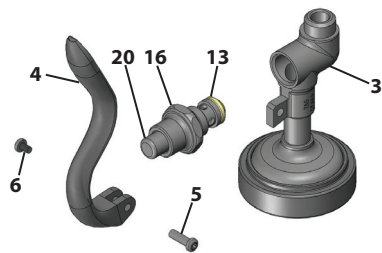

4. Apply no.21 over smooth portion of no.13. Replace no.14, no.15, no.17, no.18 & no.19 with new parts. Dab no.21 onto valve side of no.19 before replacing.

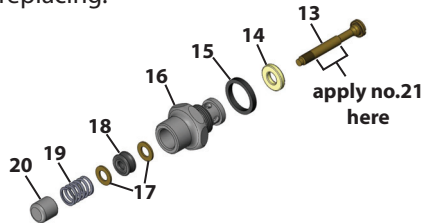


5. Reassemble no.16 by inserting no.13 through all parts. Hold no.20 with pliers, and carefully screw no.13 into no.20 until screw feels tight. Do not use excessive force.
6. Reinsert no.16 in no.3 and tighten securely.
7. Reassemble no.4, no.5 and no.6 on no.3.

8. **For EB-0107/UK-0107 & B-0107 ONLY:** To replace no.9, unscrew no.11 and disassemble. Make sure the groove side of no.9 fits over no.8, and no.10 rest on ridge side. See Figure A.

9. To replace no.2, unscrew handle grip from no.3 and replace with new no.2.

10. Reassemble; turn on water check for leaks.


Figure A

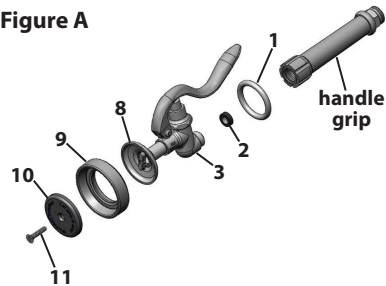

11. **For EB-0107-C, EB-0107-J, B-0107-C & B-0107-J ONLY:** To replace no.23, slide no.23 off no.25, and slide a new no.23 back onto no.25. No.23 will snap into groove on no.25. See Figure B.

* **Verify the flow rate on no.23 matches spray tip inside no.25.**

 Figure B




Caution: Turn off water supply at base faucet when not in use.

RELATED T&S BRASS PRODUCT LINE



**B-0108
JeTSpray
Spray Valve**

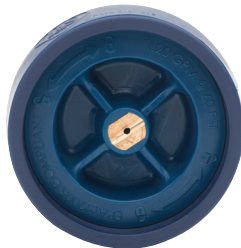

**B-0108-C
JeTSpray
Low Flow
Spray Valve**

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102
Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'
Oude Nieuwveenseweg 84
2441 CW Nieuwveen

The Netherlands



RELIABILITY BUILT IN™



Limited One Year Warranty
T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-012448-45 Rev.0
Date: 990714
Drawn: CW
Checked: MAB 11-12-99
Approved: MVW 11-13-99

Installation and Maintenance Instructions




FAUCET WITH NOZZLE AND SPRAY HOSE ASSEMBLY B-0177

**Deutsch: Installations- und
Wartungsanleitungen**

**Español: la Instalación y las
Instrucciones de
Mantenimiento**

**Français: les Instructions
d'Installation et
d'Entretien**

Exploded View

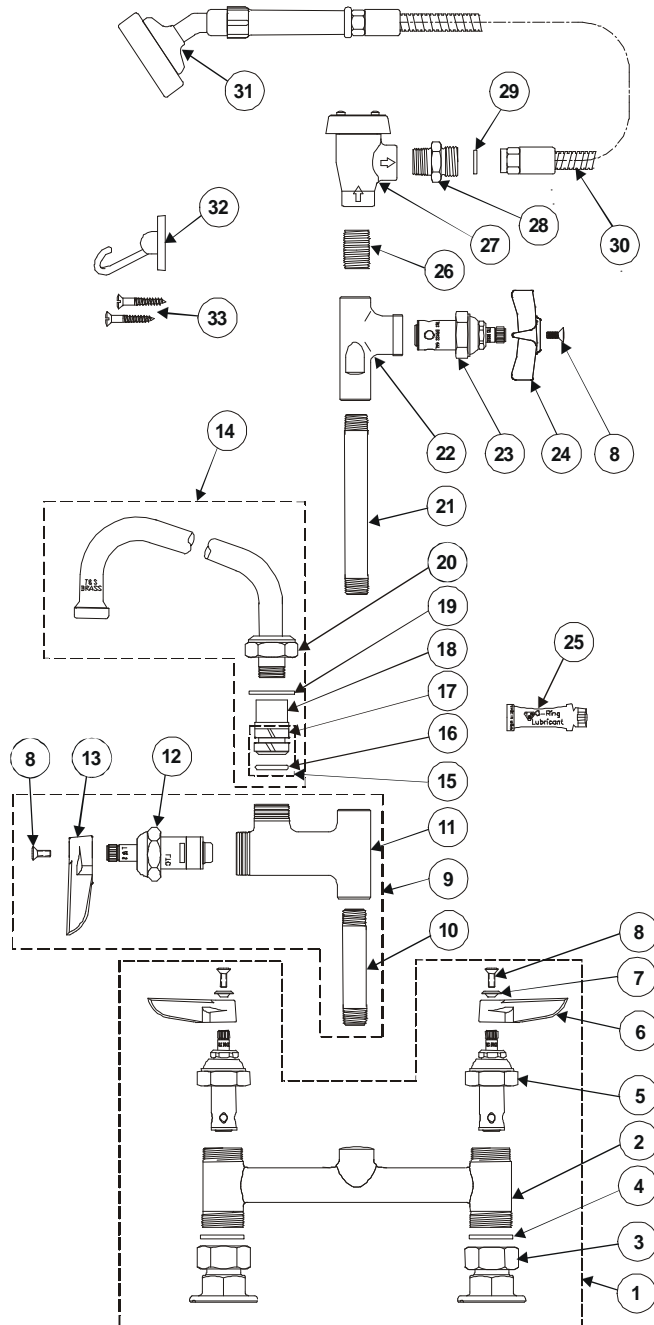

Part Number Guide

Faucet Assembly

1	Asm, Faucet (Rigid)	002829-40
2	Faucet Body (Rigid)	*
3	Asm, Coupling Flange	002893-40
4	Washer	001019-45
5	Asm, Cartridge	
	LH, w/Spring Checks	002711-40
	RH, w/Spring Checks	002712-40
6	Handle, Lever - Hot	001637-45
	Handle, Lever - Cold	001636-45
7	Index, Button	
	Hot (Red)	001661-45
	Cold (Blue)	001660-45
8	Screw, Handle	000922-45
21	Nipple, 3/8" X 4"	*
22	Valve Body	*
23	Asm, Cartridge (Cold)	005959-40
24	Handle, 4-Arm	002521-45
25	Grease Tube	*
26	Nipple	002535-25
27	Asm, Vacuum Breaker 3/8"	B-0968
28	Adapter, 3/8" MA	000545-25
29	Washer #27	010476-45
30	Asm, Flex S/S Hose	B-0080-H
31	Asm, Spray Head	005969-40
32	Asm, Wall Hook	B-0104-D
33	Screws, Wall Mount	000915-45

Add-On Faucet Assembly

9	Asm, Add-on Faucet	
	B-0155, B-0156, B-0157	005964-40
10	Nipple, 3/8" X 3"	000358-40
11	Faucet Body	*
12	Asm, Cartridge, Quarter Turn	007947-40
13	Handle, Lever (Blank)	001638-45
8	Screw, Handle	000922-45

Part Number Guide - con't

Nozzle Assembly

14	Asm, Nozzle Swing	
	Nozzle, 6"	059X
	Nozzle, 12"	062X
	Nozzle, 18"	065X
15	Repair Kit***	011643-45
16	"O"-Ring	*
17	Sleeve, Swivel	*
18	Swivel Piece	*
19	Washer, Swivel Piece	*
20	Nut, Swivel	*

***Repair kit includes items #16 and #17.


General Instructions

Nozzle Installation:

Note: Nozzles should be installed first. See diagram below:

If installing to an existing rigid pre-rinse unit or base faucet

1. Shut off water supply and drain lines. Remove no.21 from no.2. Apply Teflon tape or pipe joint compound to threaded ends of no.10.
2. Place no.10 into no.2 and tighten firmly by hand.

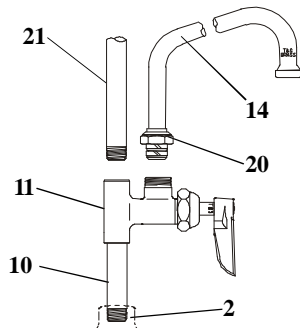


To Install Swing Nozzle:

1. Insert no.14 into no.11 and rotate to desired position at sink.


Note: See Repair Kit 011643-45 for replacement of no.16 and no.17.

2. Tighten no.20 firmly with a wrench.

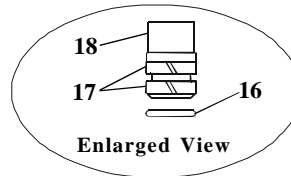


Faucet Installation:

1. Drill (2) two holes, approximately 1-1/4" diameter in countertop with 8" centers, where you are installing no.2.

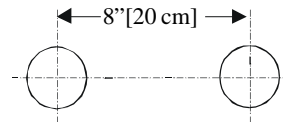


2. Apply Teflon tape or pipe joint compound to water supply lines.
3. Connect no.2 to water supply lines by screwing no.3 (with eccentric centers) onto nipple (supplied by others) and tightening no.3 against countertop. (Nut under countertop to be supplied by others). Trim supply lines if necessary.

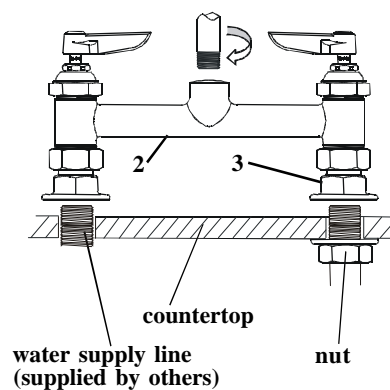


General Instructions

Installation of Control Valve:

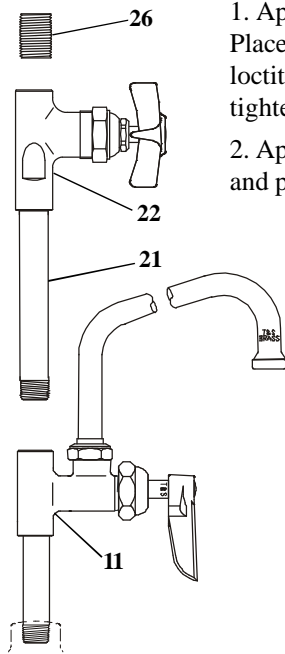

1. Apply Teflon tape on threaded ends of no.21. Place no.21 into no.22, tighten by hand. Apply loctite on no.26, insert between no.22 and no.27, tighten no.27 with a wrench.
2. Apply Teflon tape or pipe joint compound to no.21 and place into no.11 and tighten by hand.

Vacuum Breaker and Hose Installation:

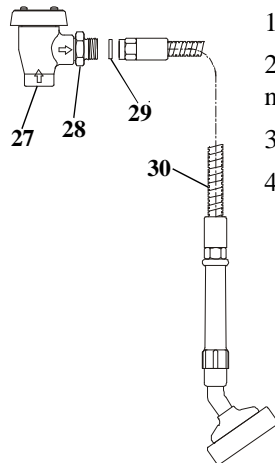

1. Apply Teflon tape on no.28 and place onto no.27.
2. Apply Teflon tape to threaded end of no.28. Attach no.30 to no.28 (make sure no.29 is in place).
3. Turn on water supply and check for leaks.
4. Install no.32 in a convient location.


Instrucciones Generales

Instalación de la boquilla:

Nota: Las boquillas deben de ser instaladas primero. Vea el diagrama abajo:

Si esta instalando a una unidad existente rígida de pre-enjuague o a la base de una canilla

1. Cierre la fuente de agua y desagüe las tuberías. Remueva la parte No. 21 de la parte No. 2. Aplique cinta de Teflon o compuesto de coyuntura a los extremos con rosca de la parte No. 10.
2. Coloque la parte No. 10 dentro la parte No. 2 y apriete firmemente a mano.

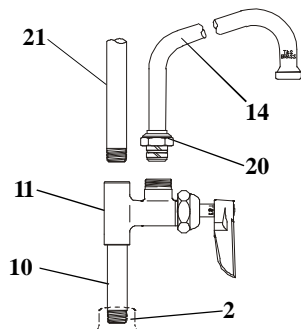


Para instalar boquilla giradora:

1. Inserte la parte No. 14 dentro de la No. 11 y gire a una posición deseada en el lavatorio.


Nota: Vea el estuche de reparos 011643-45 para remplazar las partes No. 16 y No. 17.

2. Apriete firmemente la parte No. 20 con una llave.

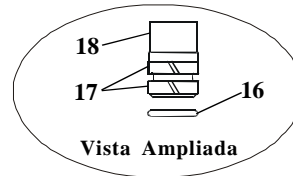


Instalación de la Canilla:

1. Perfore (2) dos huecos, aproximadamente 1¼" de diámetro con centros de 8" en el mostrador, donde la parte No. 2 será instalada.

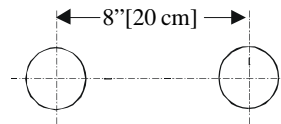


2. Aplique cinta de Teflon o compuesto de coyuntura a las líneas de surtido.

3. Conecte la parte No. 2 a las líneas de surtido atornillando la parte No. 3 (con centros excéntricos) al tubo (surtido por otros) y apriete la parte No. 3 contra el mostrador. (La tuerca debajo del mostrador será surtida por otros). Si es necesario recorte las líneas de surtido.

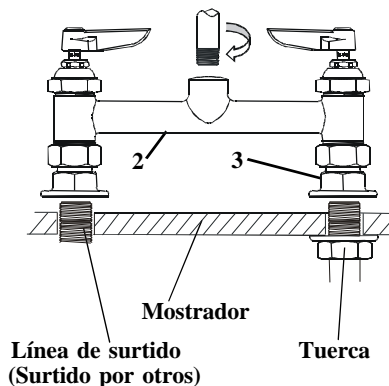

Instrucciones Generales


Instalación de la Válvula de Control:

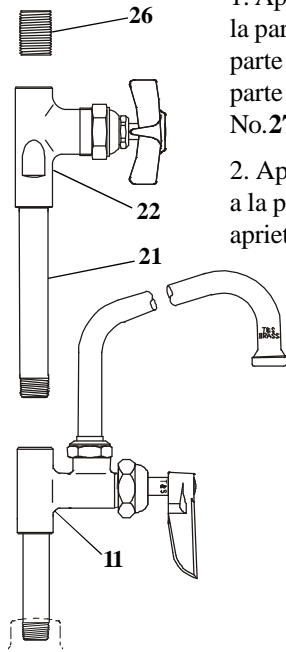

1. Aplique cinta de Teflon a los extremos con rosca de la parte No.21. Coloque la parte No.21 dentro de la parte No.22, y apriete a mano. Aplique Loctite en la parte No.26, y inserte dentro de las partes No.22 y No.27, Apriete la parte No.27 con una llave.

2. Aplique cinta de Teflon o compuesto de coyuntura a la parte No.21 colóquela dentro de la parte No.11 y apriete a mano.

Instalación de la Manguera y Anti-sifón:

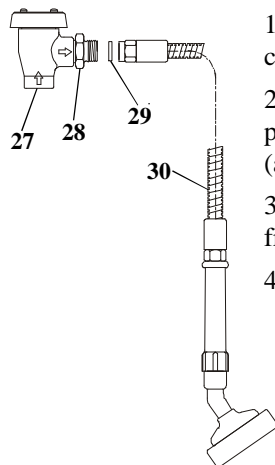

1. Aplique cinta de Teflon en la parte No.28 y colóquela dentro de la parte No.27.

2. Aplique cinta de Teflon al extremo con roscas de la parte No.28. Junte la parte No.30 a la parte No.28 (asegúrese que la parte No.29 este en su sitio).

3. Abra la fuente de agua e inspeccione por filtraciones.

4. Instale la parte No.32 en un sitio conveniente..


Instructions Générales

L'Installation De L'Ajutage:

Noter: Les ajutages doivent être installés au début. Voir le diagramme ci-dessous:

Si vous installez à l'élément Pré-encastement existant ou le robinet de la base :

1. Fermer la réserve de l'eau et égoutter la tuyauterie. Enlever N°.21 de N°.2. Appliquer le ruban en Téflon ou le composé pour les tuyaux à l'extrémité de N°.10 avec les filets.
2. Resserrer N°.10 fermement par la main dans N°.2.

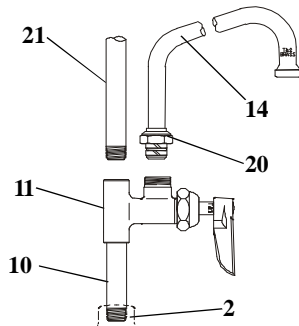


Pour Installer L'Ajutage D'Entrain:

1. Insérer N°.14 dans N°.11 et tourner jusqu'à la position désirée de l'évier.


Noter: Voir la trousse à outils **011643-45** pour remplacer N°.16 et N°.17.

2. Resserrer N°.20 fermement avec une clef anglaise.

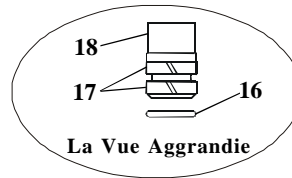


L'Installation Du Robinet :

1. Percer (2) deux trous, avec un diamètre de 1-1/4" dans le comptoir de l'évier avec les centres de 8", où vous allez installer N°.2.

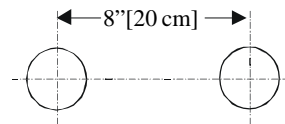


2. Appliquer le ruban en Téflon ou le composé pour les tuyaux aux filets des tuyaux qui fournissent l'eau.

3. Brancher N°.2 aux tuyaux qui fournissent l'eau en branchant N°.3 (avec les centres excentriques) sur le raccord (fourni par les autres) et resserrer N°.3 contre le comptoir. (L'écrou au-dessous du comptoir fourni par les autres). Couper un peu les tuyaux qui fournissent l'eau si nécessaire.

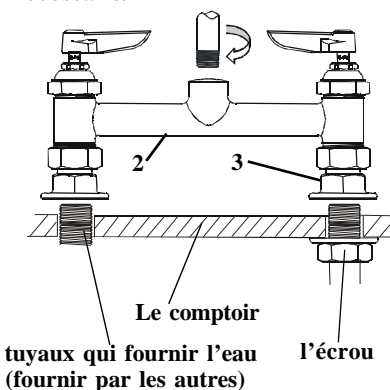


Instructions Générales

Installation de soupape de commande:

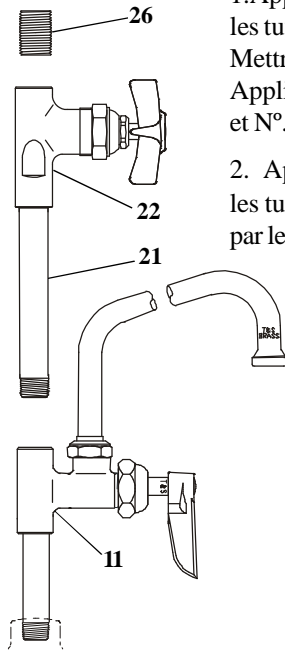

1. Appliquer le ruban en Téflon ou le composé pour les tuyaux à l'extrémité de N°.21 avec les filets. Mettre N°.21 dans N°.22 et resserrer par le main . Appliquer le "Loctite" sur N°.26, insérer entre N°.22 et N°.27, resserrer N°.27 avec une clef anglaise.
2. Appliquer le ruban en Téflon ou le composé pour les tuyaux à N°.21 et mettre dans N°.11 et resserrer par le main.

L'Installation De Briseur De Vide et Le Tuyau:

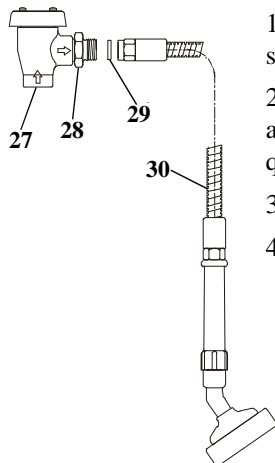

1. Appliquer le ruban en Téflon sur N°.28 et mettre sur N°.27.
2. Appliquer le ruban en Téflon à l'extrémité de N°.28 avec les filets. Attacher N°.30 à N°.28. (Soyez certain que N°.29 être à sa place).
3. Recommencer l'eau et vérifier s'il y a des fuites.
4. Installer N°.32 dans un emplacement convenable.


Allgemeine Anleitungen

Installation der Schwenkdüse:

Hinweis: Schwenkdüsen sollten als erstes installiert werden. Sehen Sie dazu das Diagramm unten:

Falls an einer bereits vorhandenen Vorspüleinheit oder einem einfachen Wasserhahn installiert wird

1. Wasserzufuhr abdrehen und Rohre leerlaufen lassen. Entfernen Sie Nr. 21 von Nr. 2. Tragen Sie Teflonband oder Rohrkitt zu den Gewindeenden der Nr. 10 auf.
2. Setzen Sie Nr. 10 in Nr. 2 und ziehen Sie es fest von Hand an.

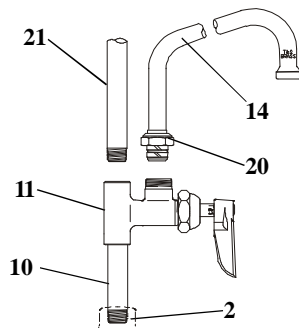

Zur Installation des Schwenkarmes:

1. Führen Sie Nr. 14 in Nr. 11 ein und drehen Sie dieses bis die gewünschte Position am Becken erreicht ist.


Hinweis: Verweisen Sie zum Reparaturkit 011643-45 für Ersatzanweisungen der Nr. 16 und Nr. 17.

2. Ziehen Sie Nr. 20 mit Hilfe eines Schraubenschlüssels fest an.




Installation des Wasserhahnes:

1. Bohren Sie (2) zwei Löcher ungefähr 3 cm (1 1/4") mit einem Abstand von 20 cm (8") von Lochmitte zu Lochmitte in die Arbeitsplatte in der Sie Nr. 2 installieren.

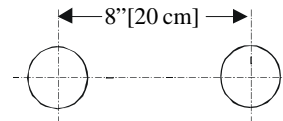


2. Tragen Sie Teflonband oder Rohrkitt auf die Wasserzufuhrleitungen auf.
3. Verbinden Sie Nr. 2 zu den Wasserzufuhrleitungen indem Sie Nr. 3 (mit versetzter Mitte) auf den Nippel (nicht in der Lieferung enthalten) schrauben und Nr. 3 gegen die Arbeitsplatte festziehen. (Die Mutter unter der Arbeitsplatte ist nicht in der Lieferung enthalten). Falls nötig Wasserzufuhrleitungen kürzen.

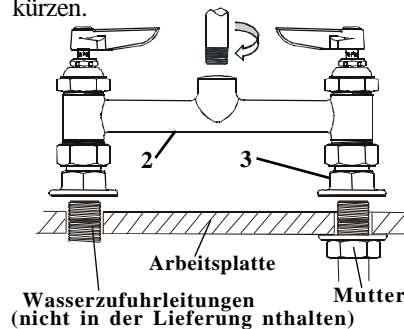

Allgemeine Anleitungen


Installation des Kontrollventils:

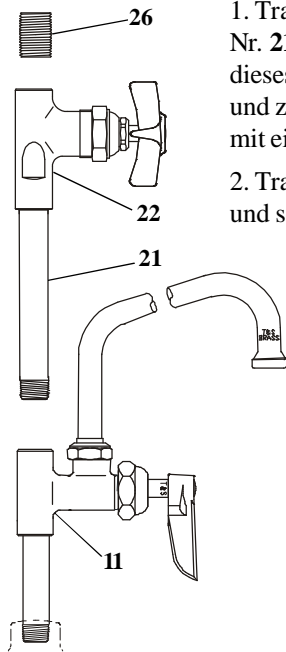

1. Tragen Sie Teflonband auf die Gewindeenden der Nr. 21 auf. Setzen Sie Nr. 21 in Nr. 22 und ziehen Sie dieses von Hand fest an. Loctite auf Nr. 26 auftragen und zwischen Nr. 22 und Nr. 27 einfügen, dann Nr. 27 mit einem Schraubenschlüssel fest anziehen.

2. Tragen Sie Teflonband oder Rohrkitt an Nr. 21 auf und setzen Sie es in Nr. 11, dann von Hand festziehen.

Vakuumsicherungs- und Schlauchinstallation:

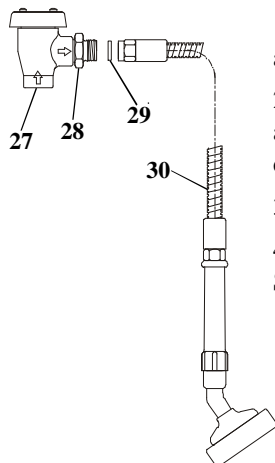

1. Teflonband auf Nr. 28 auftragen und zur Nr. 27 aufsetzen.

2. Tragen Sie Teflonband zum Gewindeende der Nr. 28 auf. Befestigen Sie Nr. 30 zur Nr. 28 (stellen Sie sicher, daß sich Nr. 29 in der richtigen Position befindet).

3. Wasserzufuhr andrehen und auf Dichtheit prüfen.

4. Installieren Sie Nr. 32 an einer günstig gelegenen Stelle.

RELATED T&S BRASS PRODUCT LINE



B-0175
Wall Mounted Faucet
with 12" Swing Nozzle
and Spray Unit



B-0176
Deck Mounted Faucet
with 12" Swing Nozzle
and Spray Unit

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102

Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe

'De Veenhoeve'

Oude Nieuwveenseweg 84

2441 CW Nieuwveen

The Netherlands

