



## Installation Instructions 2921 Hand Dryer with Recessed Duplex Receptacle

Some customers prefer a seamless look when installing the 2921 hand dryer – keeping the dryer’s power cord hidden from view. Bradley recommends the use of a specific recessed duplex receptacle (DATACOMM P/N 45-0031-WH) available from Bradley. Contact Bradley Customer Service at 1-800-272-3539 or your local Bradley distributor for pricing and availability for this accessory.

**WARNING:** Installation should only be performed by qualified persons in compliance with all applicable federal, state and local codes and standards.

**DANGER:** Failure to disconnect the power source before installation or servicing can result in serious injury or death from electric shock. Always disconnect the power source before servicing or installing the hand dryer

- 1) Bradley recommends the use of a circuit breaker with a GFCI (ground fault circuit interrupter) in combination with the recessed duplex receptacle.
- 2) Using the mounting template supplied with your 2921 hand dryer, carefully mark the (4) fastening locations indicated on the template.
- 3) The specific location for installing the recessed duplex receptacle is shown in Fig. 1.
- 4) Using the actual size template of the wall opening supplied with the DATACOMM recessed duplex receptacle and the measurements shown in Fig. 1, carefully measure and mark the location of the wall opening required for the recessed duplex receptacle.
- 5) Follow the instructions provided with the DATACOMM receptacle to complete the installation of the receptacle.
- 6) Following the installation instructions found in the Operating Instructions for the hand dryer, complete the attachment of the hand dryer’s wall mounting bracket to the wall with the mounting anchors using a No. 25 torx screwdriver.
- 7) Connect the hand dryer’s power cord to the recessed duplex outlet.
- 8) Hang the hand dryer on the bracket. While holding the bottom edge of the dryer slightly away from the wall, carefully feed and coil the length of the dryer’s power cord into the front cavity of the recessed duplex receptacle. The front cavity of the recessed duplex receptacle will accommodate the length of power cord supplied with the hand dryer.
- 9) Remove water collection tray from bottom of hand dryer, and complete the attachment of the dryer with the 4<sup>th</sup> anchor.
- 10) Replace the water collection tray.
- 11) Activate the power source to the dryer.



# Installation Instructions

## 2921 Hand Dryer with Recessed Duplex Receptacle

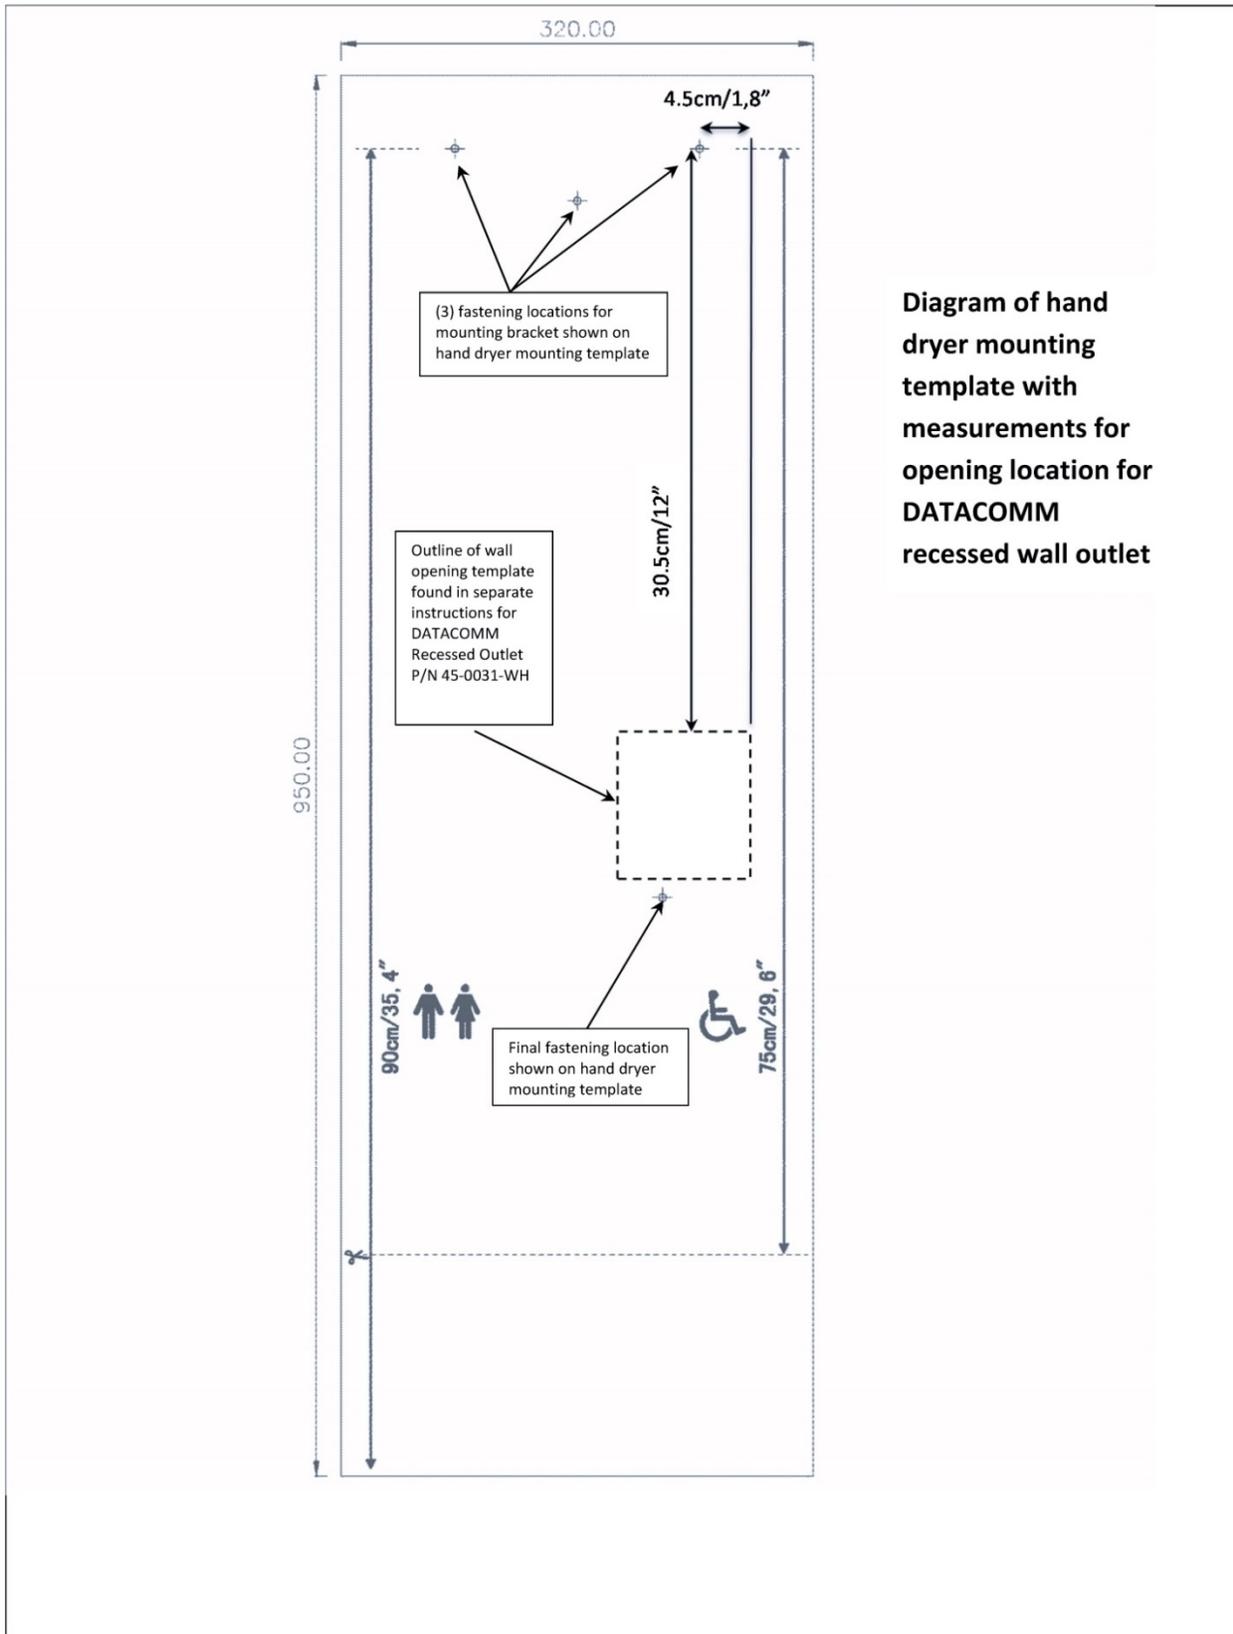


Fig. 1: Mounting Location for Recessed Duplex Receptacle