RELIABILITY BUILT IN℠

EasyInstall™

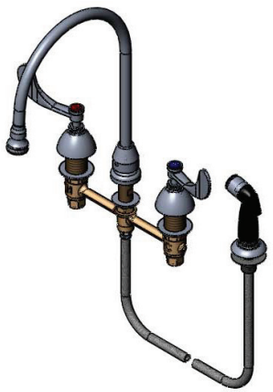

8" FIXED CENTER CONCEALED WIDESPREAD B-2300, B-2800, B-2900 SERIES

Patent # 7,472,434

Installation and Maintenance Instructions

Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its option, repair and/or replace it. To obtain warranty service, products must be returned to.....

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstance shall T&S be liable for loss of use or any special consequential cost, expenses or damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-016898-45 Rev. 2
DATE: 11-08-10
DRAWN: TEH
CHECKED: JRM 11-12-10
APPROVED: JHB 11-12-10

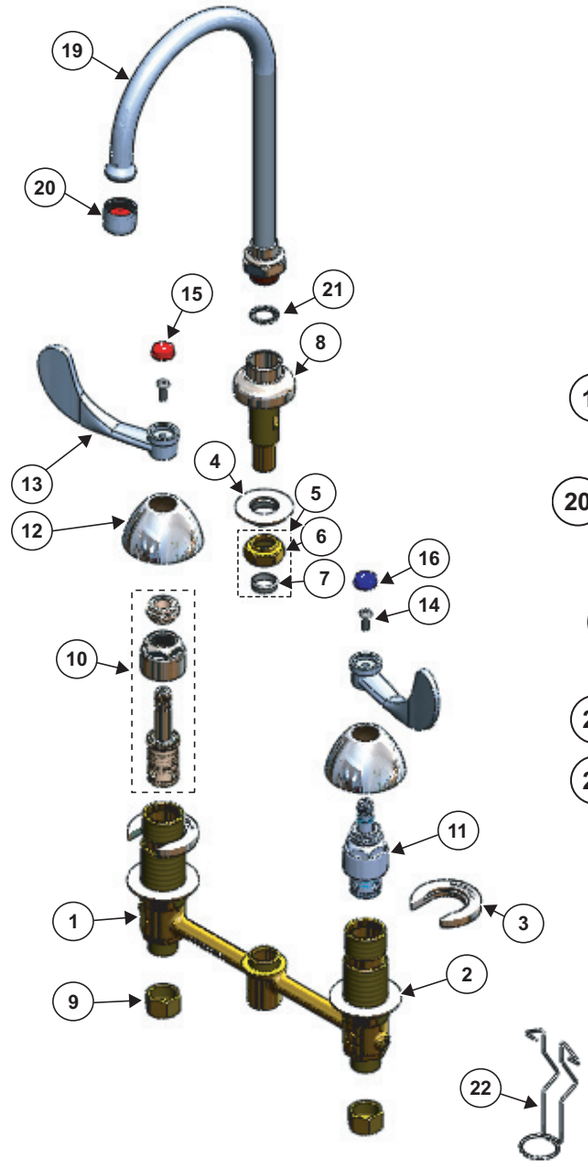

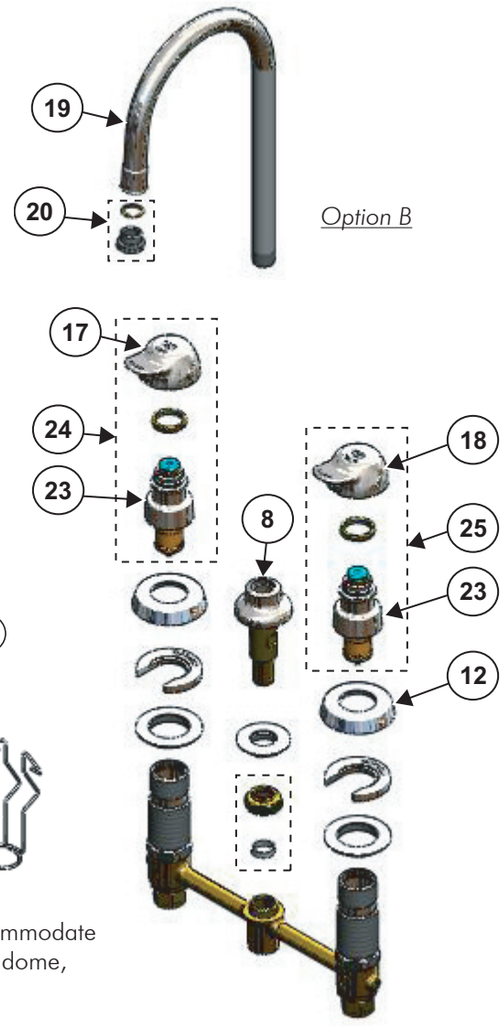

Option B: Contains low-profile escutcheon to accommodate push button metering, pivot action metering, alpine, dome, 3-wing, fast self-close and wrist action metering.

Parts List

1	Base Faucet Assembly	N/A	
2	Side Flange Nut	N/A	
3	C-Washer	016749-45	
4	Center Flange Nut	016742-45	
5	Compression & Nut Fitting	016745-45	
6	Compression Nut	N/A	
7	Compression Fitting	N/A	
8	Center Shank:		
	Center Shank, Swivel	016754-40	
	Center Shank, Rigid	016847-40	
9	Coupling Nut	000958-20	
12	Escutcheons:		
	Escutcheon, Bell	001257-40	
	Escutcheon, Metering	017292-45	Opt.B
22	Hanger	016777-45	
19	Rigid & Swivel Goosenecks	Inquire w/ T&S	
20	Aerators:		
	55/64"-27 Female Threads	B-0199-01	
	3/8" NPSM Male Threads	B-0199-02	
	13/16"-27 Male Threads	B-0199-03	
	Stream Regulator, Plain	B-LT	
	Stream Regulator w/ Screen	B-PT	
	Sidespray & Hose Assembly	001495-45	
21	Star Washer, Anti-Rotation	014200-45	

Cartridge Assemblies

10	Cartridge, Hot Eterna Teflon	016753-40	
	Cartridge, Hot Cerama	016767-25	
11	Cartridge, Cold Eterna Teflon	016752-40	
	Cartridge, Cold Cerama	016768-25	
	Wrist Action Metering	012449-40	Opt.B
	Hot Eterna Teflon - Short	017327-40	Opt.B
23	Push Button Metering	238A	Opt.B
24	Pivot Action Metering - Hot (shown)	238AH-PA	Opt.B
25	Pivot Action Metering - Cold (shown)	238AC-PA	Opt.B

Handle Assemblies

13	Handle, 4" Wrist Action (shown)	B-WH4	
	Handle, Lever	001638-45	
	Handle, 4-Arm	002521-45	
14	Screw, 4" Wrist Action (shown)	000925-45	
	Screw, Lever Handle	000922-45	
15	Index, Snap-In Red (Hot) (shown)	001194-45	
	Index, Lever Handle (Hot)	001661-45	
16	Index, Snap-In Blue (Cold) (shown)	001686-45	
	Index, Lever Handle (Cold)	001660-45	
17	Pivot Action Handle - Hot	PA-H	Opt.B
18	Pivot Action Handle - Cold	PA-C	Opt.B
	Cold Cap Assembly	014195-40	Opt.B
	Hot Cap Assembly	014194-40	Opt.B
	Lavatory Handle, 3-Wing - Cold	001784-40	Opt.B
	Lavatory Handle, 3-Wing - Hot	001783-40	Opt.B
	Fast Self-Closing Asm - Cold	002875-40	Opt.B
	Fast Self-Closing Asm - Hot	002876-40	Opt.B
	Cold Alpine Handle Assembly	076F-C	Opt.B
	Hot Alpine Handle Assembly	076F-H	Opt.B

Before starting the installation, be sure to flush supply lines and shut off water supply.

Step 1:
Take center shank out of body.

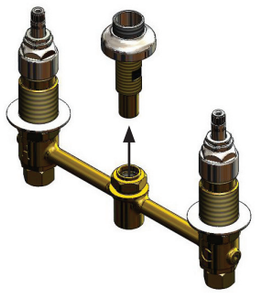

Step 2:
Place hanger on body. Add center flange nut to top of compression nut. *Option B: Remove cartridges.*

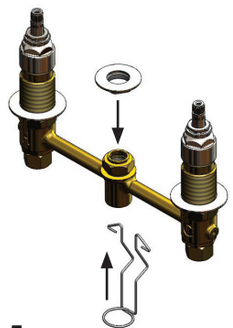

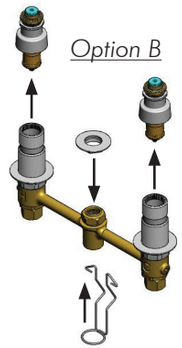

Step 3:
Insert body into deck holes until hanger snaps to top of deck. Place c-washers under bonnet nuts on side bodies.

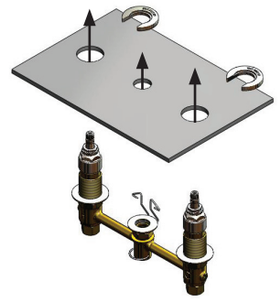

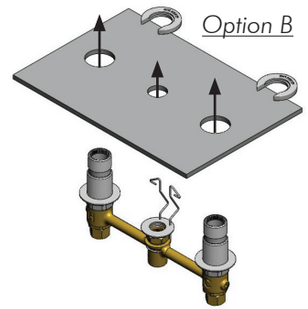

Step 4:
Option B: Screw metering escutcheons over c-washers. Tighten cartridges.

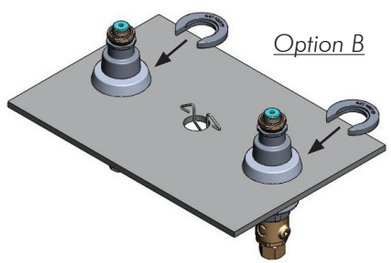

Step 5:
Squeeze hanger loops and allow hanger to drop through center hole.

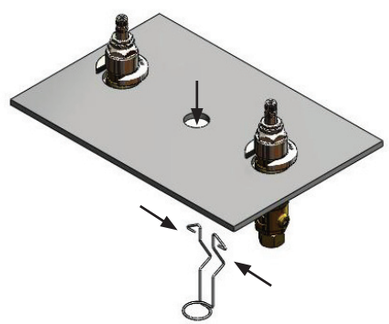

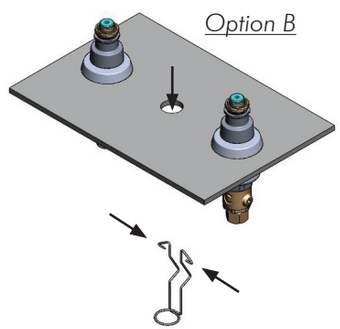

Step 6:
Remove nuts as shown. *Option B: Remove retaining rings from cartridges.* Place center body through center hole into main body. Tighten 3 flange nuts. Tighten compression nut to seal center body.

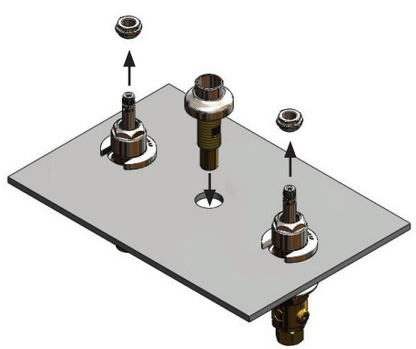

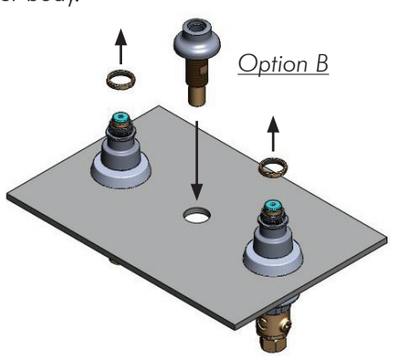

Step 7:
Add escutcheons, packing nuts, handles, spout and tighten. *Option B: Add handles, retaining rings, spout and tighten.* Turn on water supply and check for leaks.

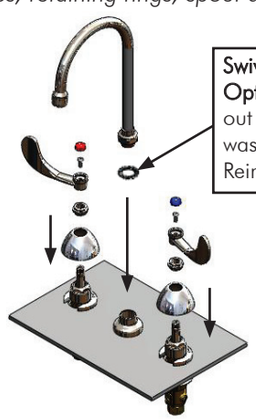

Swivel to Rigid Gooseneck Option: Uninstall and lift out gooseneck. Place star washer into swivel body. Reinstall gooseneck.

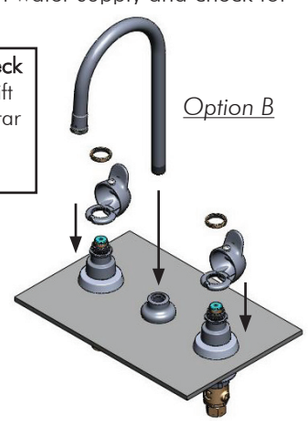

For models with sidespray:

1. Tighten diverter to center body using flat head screwdriver.
2. Remove locknuts from hose guide, place it through existing hole in sink. Reinstall locknut on the hose guide. Tighten by hand.
3. Apply Teflon tape to threaded end of sidespray, insert through hose guide and attach threaded end of side spray to base of center body. Tighten with wrench.
4. Turn on water and check for leaks.

Installation and Maintenance Instructions

B-0873, B-0874, B-1873, B-1874 and B-2973 CENTERSET LAVATORY FAUCETS (with or without Pop-Up)

Deutsch: **Installations- und Wartungsanleitungen**

Español: **la Instalación y las Instrucciones de Mantenimiento**

Français: **les Instructions d'Installation et d'Entretien**

Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover Items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-006106-45 Rev.2
Date: 980724
Drawn: CW
Checked: MAB 9-8-98
Approved: MW 9-3-98

Exploded View

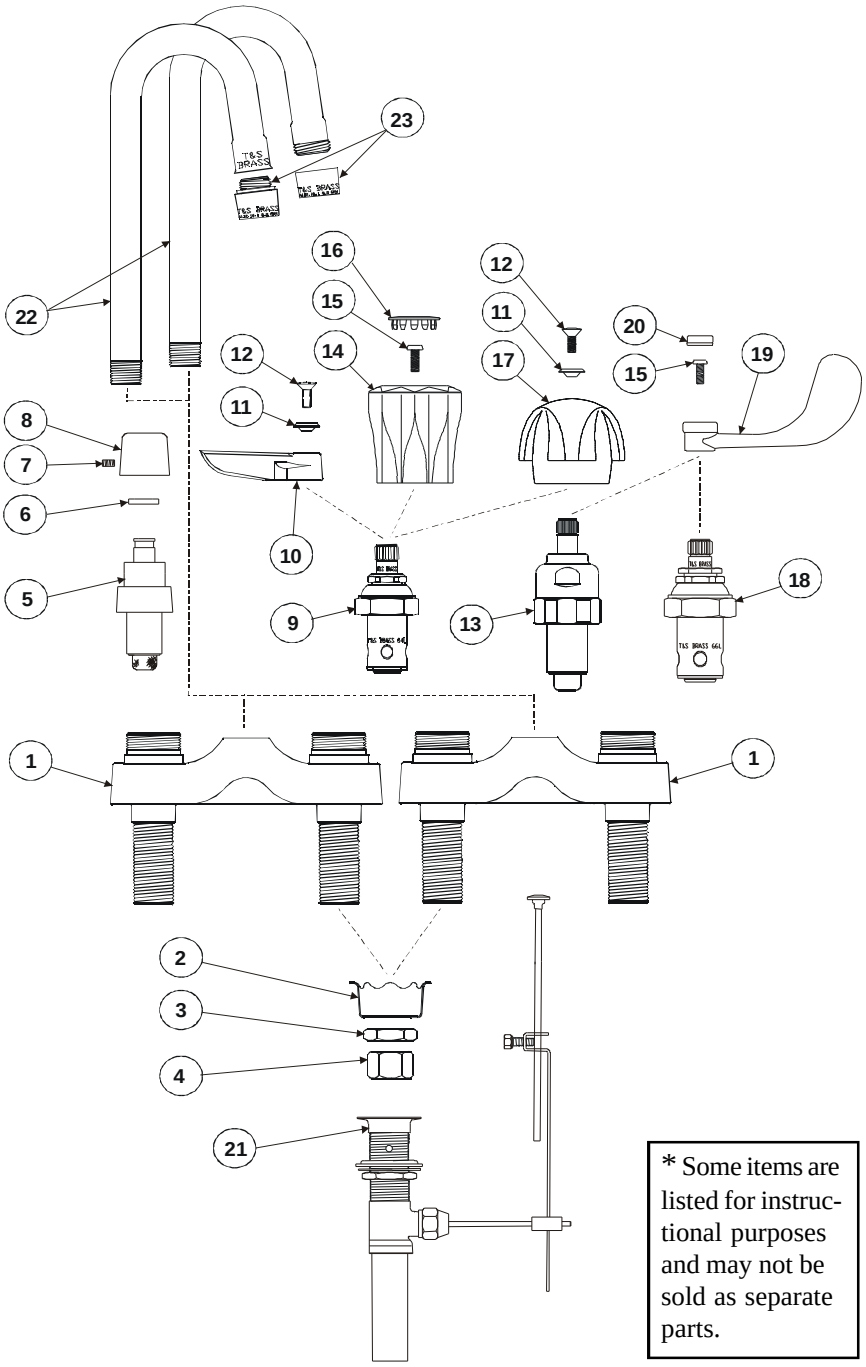

* Some items are listed for instructional purposes and may not be sold as separate parts.

Part Number Guide

Base Faucet Assemblies

1	Body Faucet for Pop-up B-0873	*
	Body Faucet w/o Pop-up B-0874	*
2	Washer, Rosette	001000-45
3	Locknut	002954-45
4	Nut, Nipple Coupling	000958-20
5	Asm, Metering Valve - Hot	002879-40
	Asm, Metering Valve - Cold	002880-40
6	Insulator, Cap	000535-20
7	Set Screw	000938-45
8	Cap - Cold	000628-40
	Cap - Hot	000627-40
9	Asm, Eterna Spindle - LH	005959-40
	Asm, Eterna Spindle - RH	005960-40
10	Handle, Lever - Cold	001636-45
	Handle, Lever - Hot	001637-45
11	Index Button, Blue - Cold	001660-45
	Index Button, Red - Hot	001661-45
12	Screw, Lever Handle	000922-45
13	Asm, Meter Valve - Hot	002879-40
	Asm, Meter Valve - Cold	002880-40
14	Handle, Alpine Lexan	001144-45
15	Screw, Lever Handle	000925-45
16	Index, Button - Blue, Cold	001327-40
	Index, Button - Red, Hot	001328-40
17	Handle, Lavatory - 3 Wing - Cold	001784-40
	Handle, Lavatory - 3 Wing - Hot	001783-40
18	Asm, Eterna Spindle - Cold	006009-40
	Asm, Eterna Spindle - Hot	006010-40
19	Handle, Wrist Action 4" Cold	B-WH4C
	Handle, Wrist Action 4" Hot	B-WH4H
20	Index, Snapin - Red, Hot	*
	Index, Snapin - Blue, Cold	*
21	Asm, Drain Pop-up	B-0898

Nozzle Assemblies

22	Nozzle, Gooseneck BL-5570-01	005028-40
	Nozzle, Gooseneck B-0892	000393-40
23	Aerator 3/8-18 Male Thread	B-0199-02
	Aerator 55/64-27 Female Thread	B-0199-01

General Instructions

Nozzle Installation: B-0873

Note: Nozzle should be installed first.

1. Apply teflon tape or pipe joint compound to threaded end of no.**22**. Screw no.**22** into no.**1**, rotate no.**22** to face front of sink.

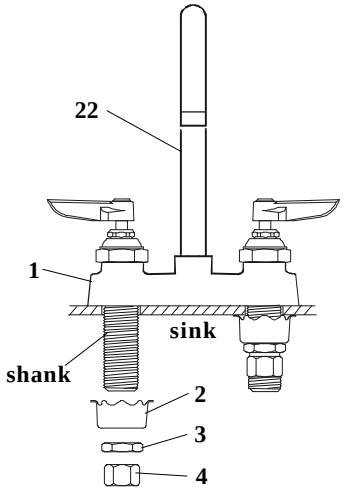

Faucet Installation: B-0873

2. Shut off water supply and drain lines. Drill (2) two holes into sink or countertop.

3. Remove no.**4**, **3**, and **2** from no.**1** shank, then install no.**1** thru holes in sink, replace no.**2**, **3**, and **4**. Tighten no.**3** with a wrench.

4. Connect water supply lines and check for leaks.

Installation: (Pop-Up Valve)

1. Remove **pop-up drain stopper**, with **'o'-ring** and **flange** from **pop-up assembly**.

2. Remove **rod clip**, **lift rod**, **rod guide nut**, **rubber washer** and **rod ball assembly** from **drain body**.

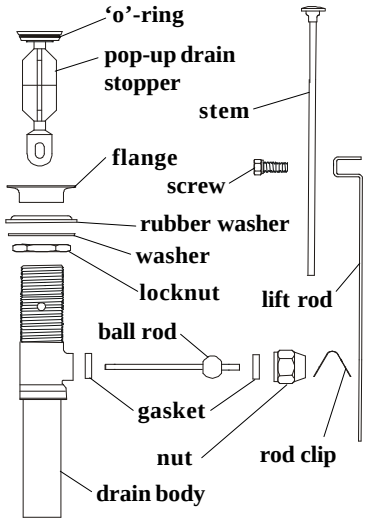

3. Insert **drain body** from bottom of sink drain hole, reassemble **flange** to **drain body**, tightening as far possible.

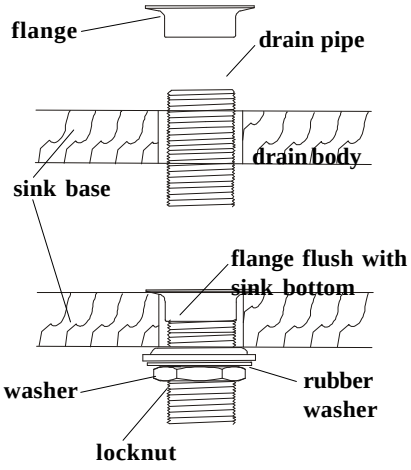

4. Slide **rubber washer** on **drain pipe** up against bottom of sink. Tighten **washer** and **locknut** firmly against base for a tight seal.

General Instructions

5. Replace **pop-up drain stopper** in **drain body**, with **'o'-ring** in place, and align stopper hole with guide and opening.

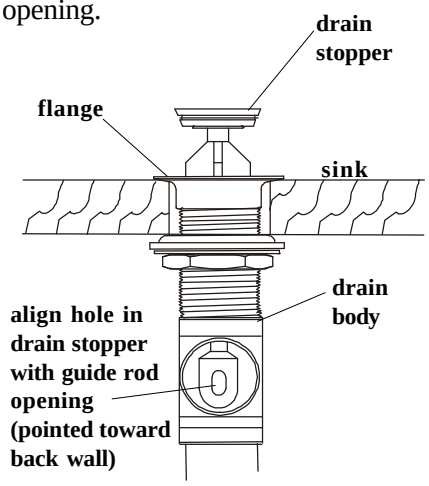

6. Reinsert **rod ball assembly** back into **drain body** and through hole in **drain stopper**.

7. Insert **pop-up stem** through hole in faucet body. Attach **lift rod** to **pop-up stem** by inserting **stem** through hole in **lift rod**. Reassemble **rod guide**, **washer** and **nut**, and tighten firmly.

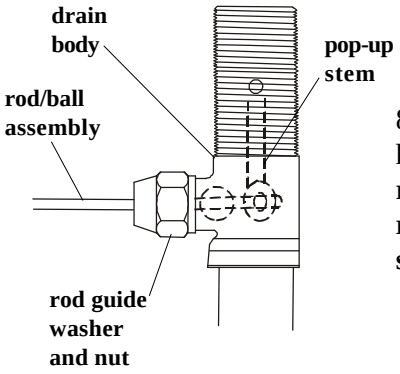

8. Adjust **pop-up stem** to correct height by opening drain, and sliding **lift rod** and **rod clip** at the same time onto **rod/ball assembly**. Readjust **lift rod screw** if necessary, hand-tighten.

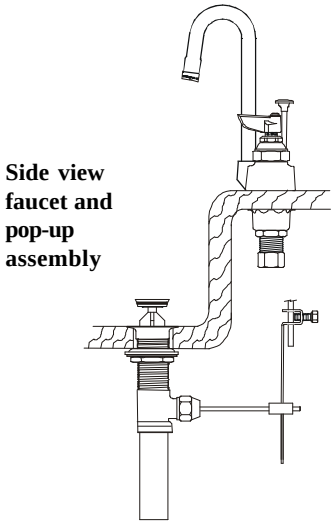

9. Make connection to supply lines.

10. Turn on water supply and check for leaks.

Instrucciones Generales

Instalación de la Boquilla: B-0873

Nota: La boquilla debe de ser instalada primero.

1. Aplique cinta de Teflon ó compuesto de coyuntura de tubería al extremo con rosca de la parte No.**22**. Atornille la parte No.**22** entre la parte No.**1** y gire la parte No.**22** hacia el frente del lavatorio.

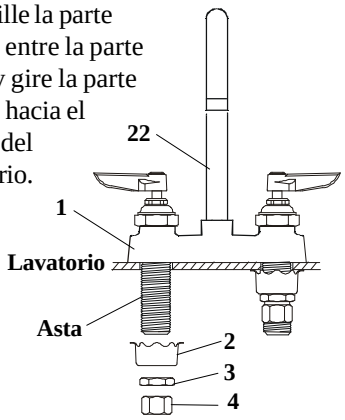

Instalación de la Canilla: B-0873

2. Cierra el surtido de agua y desagüe las tuberias. Perfore (2) dos huecos en la lavatorio ó el mostrador.

3. Remuéva las partes No.4, 3 y 2 del asta de la parte No.1, luego instale la parte No.1 a través de los huecos en el lavatorio, coloque de nuevo las partes No.2, 3 y 4. Aprete la parte No.3 con una llave.

4. Conecte las lineas de surtido de agua e inspeccione por filtraciones.

Instalación: (Valvula De Tapón)

1. Remuéva el tapón con el anillo de caucho y el reborde del ensamble del tapón.

2. Remuéva la grampa de varilla, la varilla de gancho, el guia para la tuerca de varilla, la arandela de caucho y el ensamble de la bola con varilla del cuerpo de desagüe.

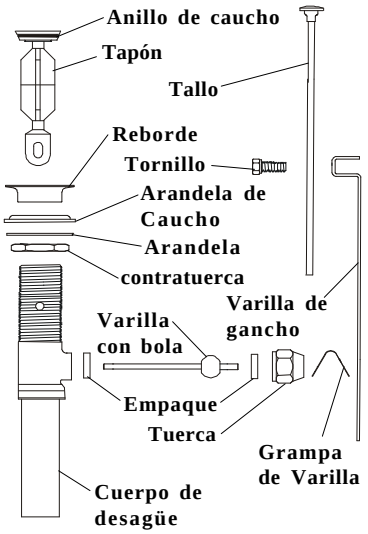

3. Por la parte de abajo en el hueco de desagüe del lavatorio insarte el cuerpo de desagüe, ensamble de nuevo el reborde a el tubo del desagüe, y aprete hasta el máximo trayecto.

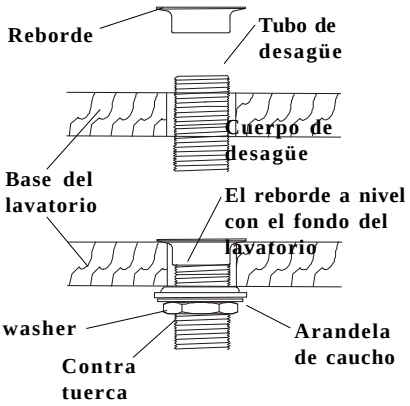

4. Deslize la arandela de caucho en el tubo de desagüe contra la parte de abajo del lavatorio. Aprete la arandela y contratuerca firmemente contra la base para formar un sello apretado.

Instrucciones Generales

5. Coloque de nuevo el tapón en el cuerpo de desagüe, con el anillo de caucho en su sitio y alinee el hueco del tapón con el guia y la avertura.

6. Insarte de nuevo el ensamble de la varilla con bola en el cuerpo de desagüe y a través del hueco del tapón.

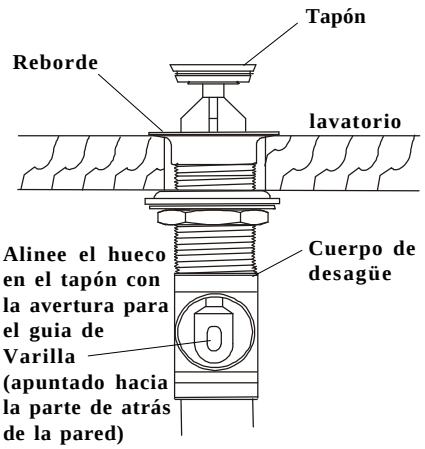

7. Insarte el tallo del tapón a través del hueco en el cuerpo de la canilla. Una la varilla de gancho a el tallo para el tapón, insartando el tallo a través del hueco en la varilla del gancho; Arme de nuevo el guia de la varilla, la arandela y tuerca y aprete firmemente.

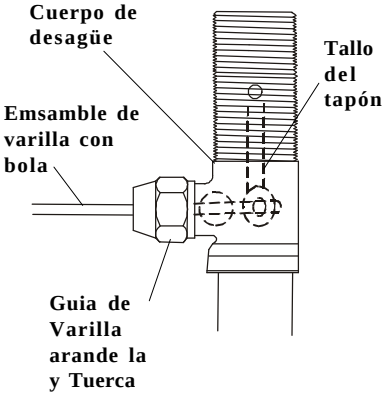

8. Ajuste el tallo del tapón a la altura correcta, abriendo el desagüe y deslizando la bola. Si es necesario ajuste de nuevo el tornillo de la varilla de gancho, aprete a mano.

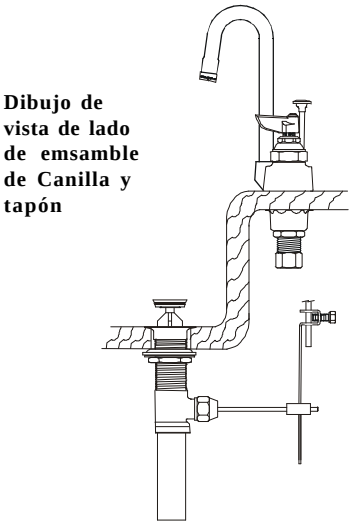

9. Haga las conecciones a la linea de surtido.

10. Abra el surtido de agua e inspeccione por filtraciones.

Instructions Générales

L'Installation de L'Ajutage:

Noter : L'ajutage devoir être installer au début.

1. Appliquer le ruban en Téflon ou le composé pour les tuyaux à l'extrémité avec les filets de Nº.**22**. Visser Nº.**22** dans Nº.**1**, tourner Nº.**22** à la face de l'évier .

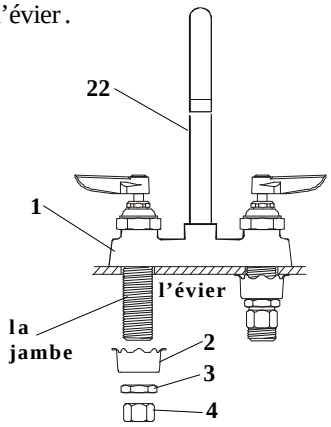

L'Installation du Robinet: B-0873

2. Fermer la réserve de l'eau et égoutter la tuyauterie. Percer (2) deux trous dans l'évier ou le comptoir .

3. Enlever Nº.**4**,**3** et **2** de la jambe de Nº.**1**, puis installer Nº.**1** à travers les trous dans l'évier, remplacer Nº.**2**,**3** et **4**. Resserrer avec une clef anglaise.

4. Brancher les tuyaux qui fournir l'eau et vérifier s'il y a des fuites.

L'Installation:
(la soupape instantanée)

1. Enlever le bouchon instantané, avec l'anneau de o et la bride de l'assemblage instantané.

2. Enlever le collier de tige, la tige d'ascenseur, l'écrou qui diriger la tige, la rondelle en caoutchouc et l'assemblage de la tige de boule de l'égout.

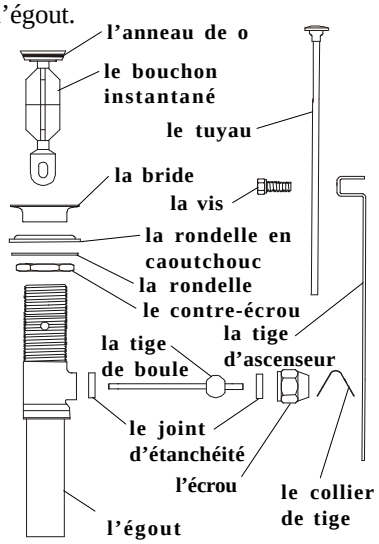

3. Insérer l'égout du fond du trou de décharge de l'évier, réassembler la bride à l'égout, resserrer fermement.

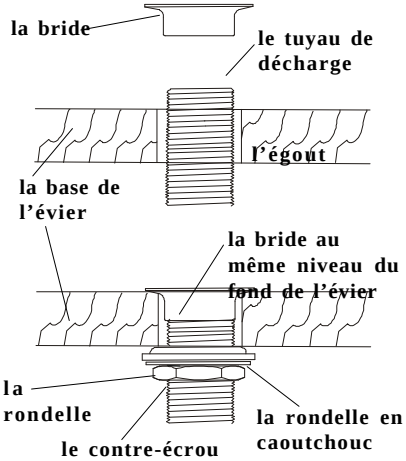

4. Faire glisser la rondelle en caoutch-ouc sur le tuyau de décharge contre le fond de l'évier. Resserrer la rondelle et le contre-écrou fermement contre la base.

Instructions Générales

5. Remplacer le bouchon instantané dans l'égout avec l'anneau de "o" à sa place, et aligner le trou du bouchon avec la guide et la percée.

6. Réinsérer l'assemblage de la tige de boule dans l'égout et à travers le trou dans le bouchon.

7. Insérer le tuyau instantané à travers le trou dans l'égout. Attacher la tige d'ascenseur au tuyau instantané en insérant le tuyau à travers le trou dans la tige d'ascenseur. Réassembler la rondelle et l'écrou qui diriger la tige et resserrer fermement.

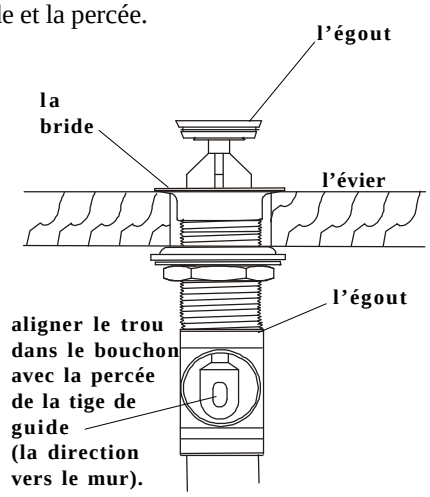

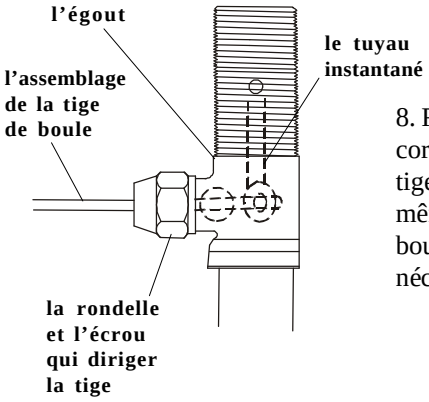

8. Régler le tuyau instantané au hauteur correct en ouvrant l'égout, et en mettant la tige d'ascenseur et le collier de la tige, au même temps sur l'assemblage de la tige de boule. Régler la vis de la tige d'ascenseur si nécessaire, resserrer par le main.

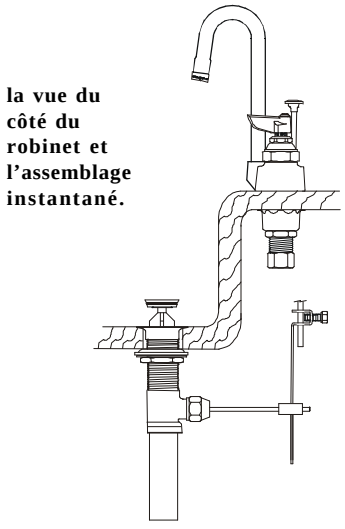

9. Brancher les tuyaux qui fournir l'eau.

10. Recommencer l'eau et vérifier s'il y a des fuites.

Allgemeine Anleitungen

Installation des Schwenkarms: B-0873

Hinweis: Schwenkarme sind als erstes zu installieren.

1. Für das Anschraubende Nr. **22** Teflonband oder Rohrdichtungsmasse verwenden. Nr. **22** in Nr. **1** einschrauben. Nr. **22** so drehen, daß es auf dem Spültisch nach vorne gerichtet ist.

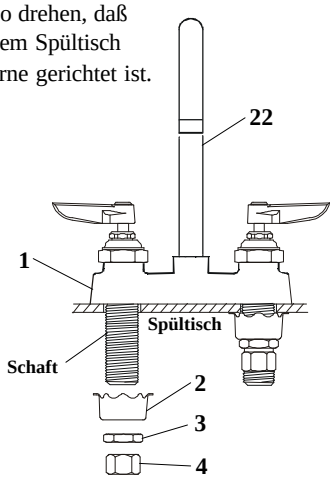

Installation der Armatur: B-0873

2. Den Wasserzulauf schließen und die Leitungen leeren. Zwei Löcher in den Spültisch bzw. in die Abdeckplatte bohren.

3. Nr. **4**, **3** und **2** von Nr. **1** (Schaft) entfernen, dann Nr. **1** durch die Löcher im Spültisch führen und Nr. **2**, **3** und **4** wieder anbringen. Nr. **3** mit einem Schraubenschlüssel fest zuziehen.

4. Wasserzulauf andrehen und auf Dichtigkeit überprüfen.

Installation: (Schnellverschlußventil)

1. ***Schnellverschluß-Stöpsel*** mit ***O-Ring*** und ***Flansch*** von der ***Schnellverschluß-Garnitur*** entfernen.

2. Die ***Stangenklammer***, die ***Zugstange***, die ***Stangenführungsmutter***, die ***Gummiunterlegscheibe*** und die ***Kugelgelenkstangen-garnitur*** vom ***Wasserablauf*** entfernen.

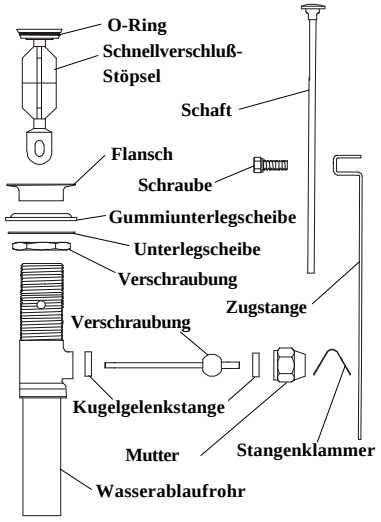

3. ***Wasserablaufrohr*** von unten in das Spültischloch einführen, ***Flansch*** mit dem ***Wasserablaufrohr*** verbinden, so weit wie möglich festdrehen.

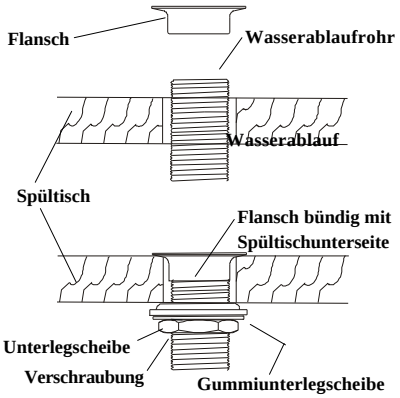

4. Die ***Gummiunterlegscheibe*** auf das ***Wasserablaufrohr*** gegen die Spültischunterseite schieben. Zur Abdichtung ***Unterlegscheibe*** und ***Verschraubung*** fest gegen Grundplatte anziehen.

Allgemeine Anleitungen

5. Den *Schnellverschluß-Stöpsel* mit dem korrekt eingesetzten *O-Ring* wieder in den *Auslauf* einsetzen und das Stöpselloch nach der *Zugstangenführung* und der Öffnung ausrichten.

6. Die *Kugelgelenkgarnitur* wieder in den *Auslauf* und in das Loch im *Auslaufstöpsel* einsetzen.

7. Den *Schnellverschlußschaft* durch das Loch im Armaturrumpf einführen. Die *Zugstange* mit dem *Schnellverschlußschaft* verbinden, indem der Schaft durch das Loch in der *Zugstange* eingeführt wird. Die *Zugstangenführung*, *Unterlegscheibe* und *Mutter* zusammensetzen und fest anziehen.

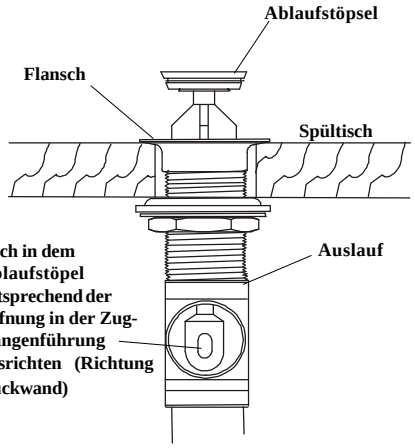

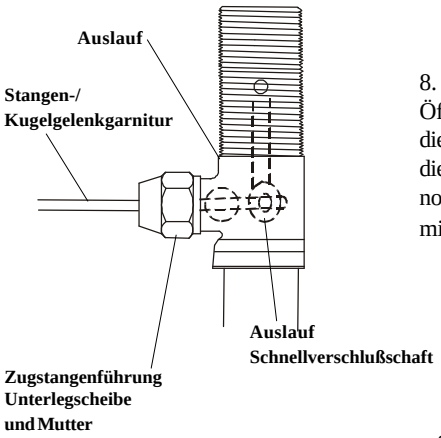

8. Die Höhe des *Schnellverschlußschafts* durch Öffnen des *Auslaufs* justieren und gleichzeitig die *Zugstange* und *Zugstangenklammer* auf die *Zugstangengarnitur* schieben. Falls notwendig, die *Zugstangenschraube* justieren, mit der Hand festdrehen.

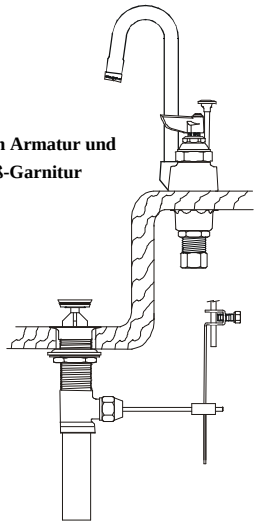

9. Mit den Wasserleitungen verbinden.

10. Wasserleitung aufdrehen und auf Dichtigkeit prüfen.

RELATED T&S BRASS PRODUCT LINE

B-0870
CENTER SET LAVATORY FAUCET with POP-UP

B-0830
SLOW SELF-CLOSING CENTER SET LAVATORY FAUCET with POP-UP

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690
Phone: (864) 834-4102
Fax: (864) 834-3518
E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'
Oude Nieuwveenseweg 84
2441 CW Nieuwveen
The Netherlands

T&S RELIABILITY BUILT IN™

Installation and Maintenance Instructions

Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to…

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover Items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-002261-45 Rev 3
Date: 09-12-01
Drawn: TEH
Checked: DLT 11-27-01
Approved: MVW 12-11-01

FLOOR MOUNTED DOUBLE PEDAL VALVE B-0502

Deutsch: **Installations- und Wartungsanleitungen**

Español: **la Instalación y las Instrucciones de Mantenimiento**

Français: **les Instructions d'Installation et d'Entretien**

Exploded View

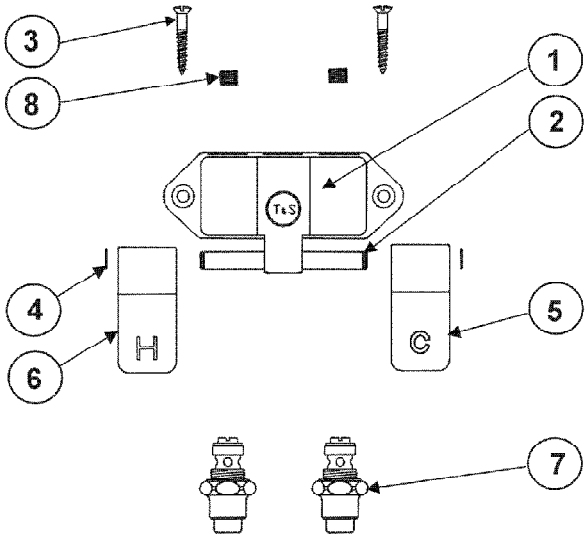

Bonnet Assembly

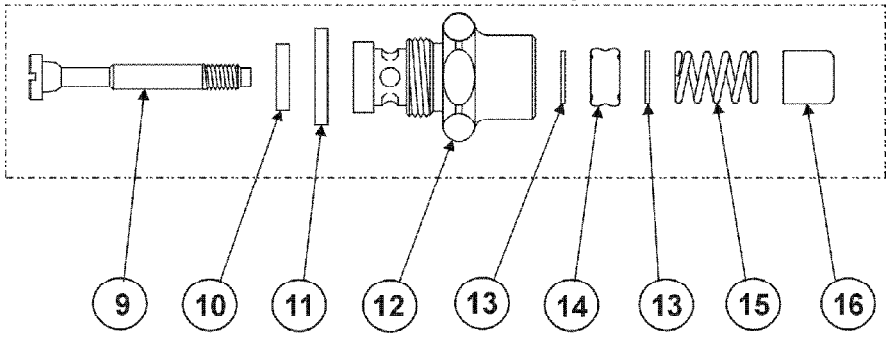

* Some items are listed for instructional purposes and may not be sold as separate parts.

Part Number Guide

Body & Shaft Assembly

1	Body, Double Pedal	*
2	Shaft	*
3	Screw, Mounting	000915-45
4	Snap-ring	012512-45
5	Pedal, Foot (Cold)	000091-25
6	Pedal, Foot (Hot)	000092-25
7	Asm, Bonnet	005312-40
8	Socket Plug	*

Bonnet Assembly - 005312-40

9	Stem, Valve	009306-20
10	Seat Washer	012915-45
11	Washer, Bonnet Binding	*
12	Bonnet	000608-25
13	Washer	000974-45
14	Packing Stem	001100-45
15	Spring	003690-45
16	Pushbutton	000753-25

Note: Items 9-11 and 13-15 are included in the B-50-P parts kit Each item with a quantity of 4

General Instructions

Installation:

1. Shut off water supply and drain lines.

2. Drill (two) holes for ½" NPT (National Pipe Threads) inlets and (one) ½" NPT outlets for connections coming from wall. (See drilling dimensions for hole.)

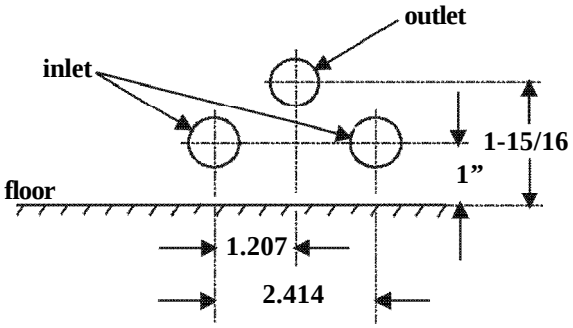

3. Mount assembly to floor with two no.**3**'s, allowing 4" [10 cm] or more from back of unit to wall. Install two (2) inlets (hot and cold sides) and one (1) outlet.

4. Apply teflon tape or pipe joint compound to threads of supply lines. Connect supply lines with ½" NPT piping.

5. Turn on water and check for leaks.

Note: It is strongly recommented that each supply line be equipped with a hammer arrester installed per manufacturer's instructions. A typical installation is shown:

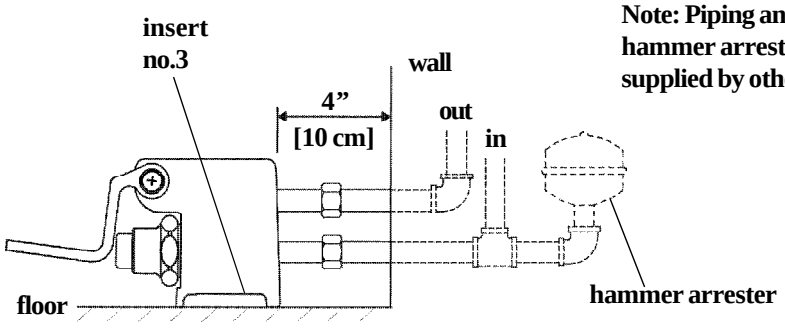

Note: Piping and hammer arrester supplied by others.

Note: To order replacement parts, order the B-50-P parts kit. (For repair of no.7)

Instrucciones Generales

Instalación:

1. Cierre la fuente de agua y desagüe las tuberias.

2. Perfore 2 (dos) huecos para entradas con rosca de tamaño 1/2" NPT (Rosca Nacional De Tubo) y 1 (uno) 1/2" NPT de salida para conecciones que vienen de la pared. (Vea dimensiones para taladrar el hueco.)

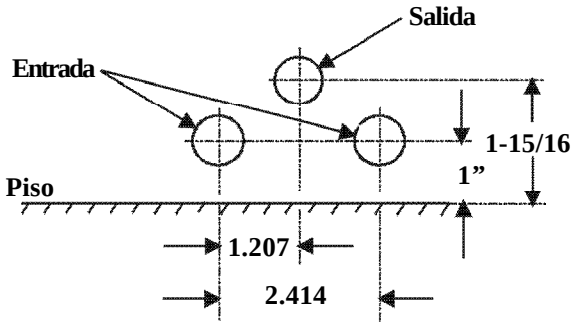

3. Con dos partes No.**3** monte el ensamble al piso, permitiendo 4" [10 cm] ó más de la parte de atrás de la unidad a la pared. Instale 2 (dos) entrada (lados caliente y frío) y 1 (una) salida.

4. Aplique cinta de Teflon ó compuesto de coyuntura para tubería a las roscas de las lineas de surtido. Conecte las lineas de surtido con tubería tamaño 1/2" NPT.

5. Abra el agua e inspeccione por filtraciones.

Nota: Es altamente recomendado que cada línea de surtido sea equipada con amortiguador de vibración. Una instalación típica esta demostrada:

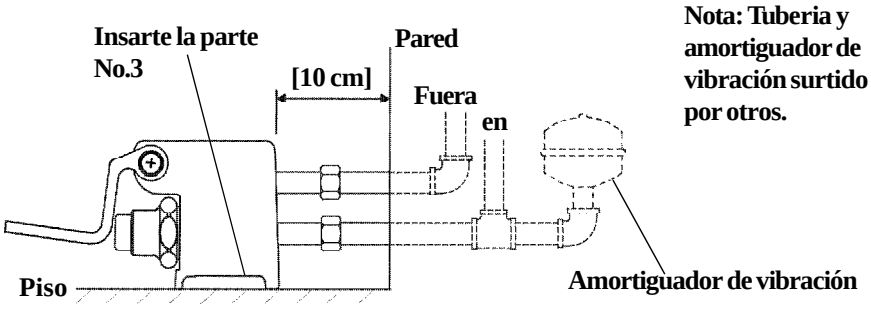

Nota: Para pedir repuestos, pida el estuche de partes B-50-P. (Para reparo de la parte No.7).

Instructions Générales

L'Installation:

1. Fermer la réserve de l'eau et égoutter la tuyauterie.

2. Percer (deux) trous pour les arrivées 1/2" NPT (en Anglais -National Pipe Thread- la traduction littérale en Français: le filet de tuyau national) et (une) sortie 1/2" NPT pour les connexions du mur. (Voir les dimensions pour percer les trous).

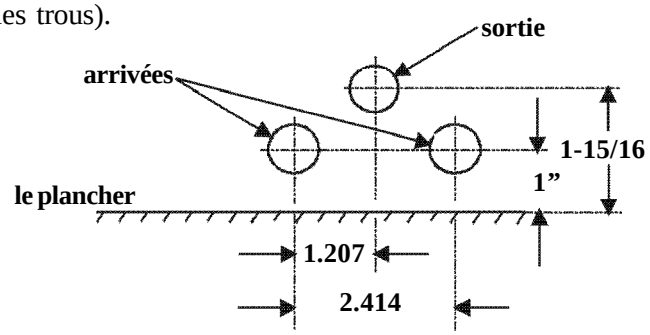

3. Monter l'assemblage au plancher avec deux Nº.**3** en permettant 10cm. ou plus de l'arrière de l'élément au mur. Installer (2) arrivées (les côtés froids et chauds) et (1) sortie.

4. Appliquer le ruban en Téflon ou le composé pour les tuyaux aux filets des tuyaux qui fournir l'eau. Brancher les tuyaux qui fournir l'eau avec la tuyauterie de 1/2" NPT.

5. Recommencer l'eau et vérifier s'il y a des fuites.

Noter: On lui recommande vivement que chaque canalisation d'alimentation devrait être équipée d'un "arrête-vibrations". Une installation typique est montrée.

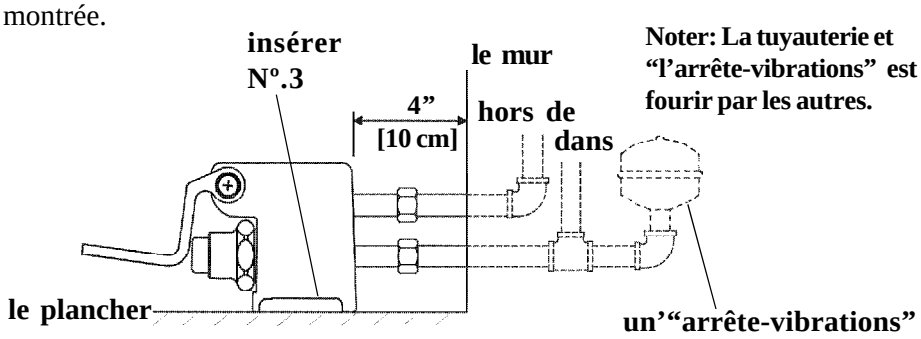

Noter: Pour commander les parties remplacements, commander; la trousse des parties B-50-P (Pour réparer Nº.7).

Allgemeine Anleitungen

Installation:

1. Wasserzulauf schließen und die Leitungen leeren.

2. Löcher für zwei Zuflußleitungen mit 1/2" NPT - ***(nationales Rohrgewinde)*** und eine Abflußleitung mit 1/2" NPT zum Anschluß an die Wand bohren. ***(Bohrmaße für Löcher beachten.)***

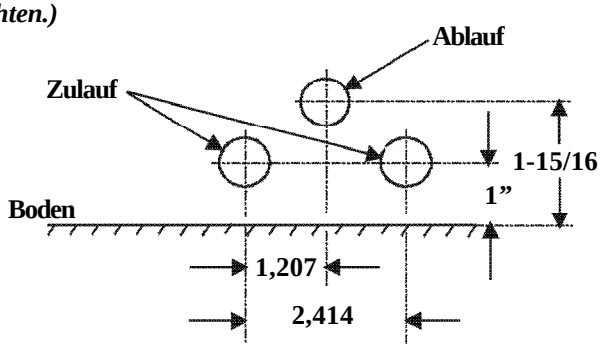

3. Garnitur am Boden mit zwei Nr. **3** montieren, wobei zwischen der Einheit und der Wand ein Abstand von mindestens 10 cm eingehalten werden muß. Zwei Zuflußleitungen (für Kalt- und Warmwasser) und eine Abflußleitung installieren.

4. Für die Gewinde der Zulaufleitungen Teflonband oder Rohrdichtungsmasse verwenden. Zulaufleitungen mit den 1/2" NPT Rohrleitungen verbinden.

5. Wasserzulauf andrehen und auf Dichtigkeit prüfen.

Achtung: Es empfiehlt sich in jeder Wasserleitung einen Rückschlag Arrettierer einzubauen. Typisch erfolt der Einbau wie abgebildet:

Anmerkung: Rohre und Rückschlag Arrettierer nicht über unsere Firma erhältlich.

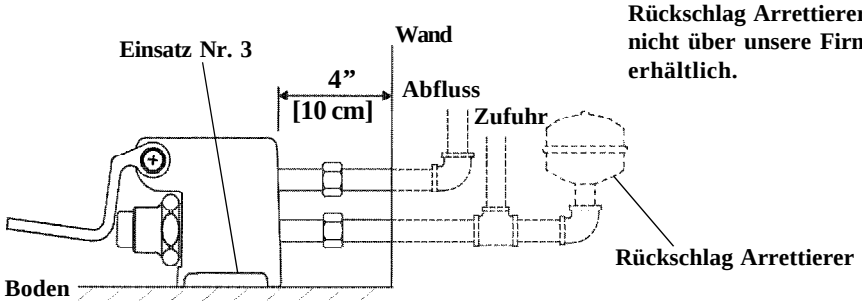

Anmerkung: Bei Bestellung von Ersatzteilen, bitte den Teile satz B-50-P bestellen (zur Reparatur von Nr. 7).

RELATED T&S BRASS PRODUCT LINE

B-0504
DOUBLE PEDAL VALVE,
WALL MOUNTED

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690
Phone: (864) 834-4102
Fax: (864) 834-3518
E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'
Oude Nieuwveenseweg 84
2441 CW Nieuwveen
The Netherlands

T&S RELIABILITY BUILT IN™