

TC Hand Sanitizer Station

Assembly Instructions



technical concepts
Innovative Hygiene Solutions


STAND ASSEMBLY

1




1. Set base plate with rubber feet on the floor.

2

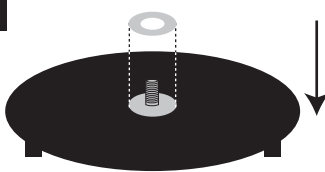


2. Add lock washer (from enclosed hardware kit) to top of base plate on center threaded extension.

3

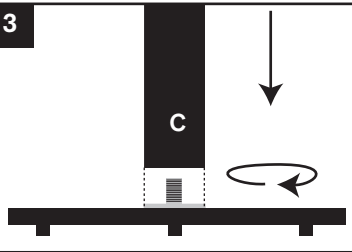

3. Attach recessed end of lower column to the base plate, by twisting it clockwise until firmly attached (no gap).


4

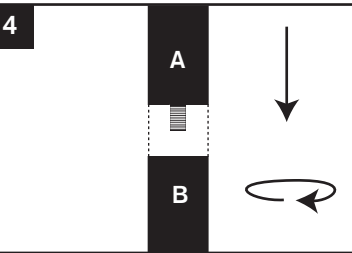


4. Place upper column into lower column and twist clockwise to tighten completely.

MOUNTING DISPENSER

5

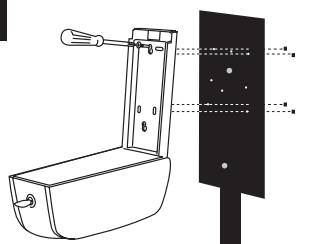

5. Using the hardware kit included, attach dispenser to mounting plate, and tighten firmly. (Hardware kit includes 4 screws and 4 lock nuts for attaching the dispenser.)

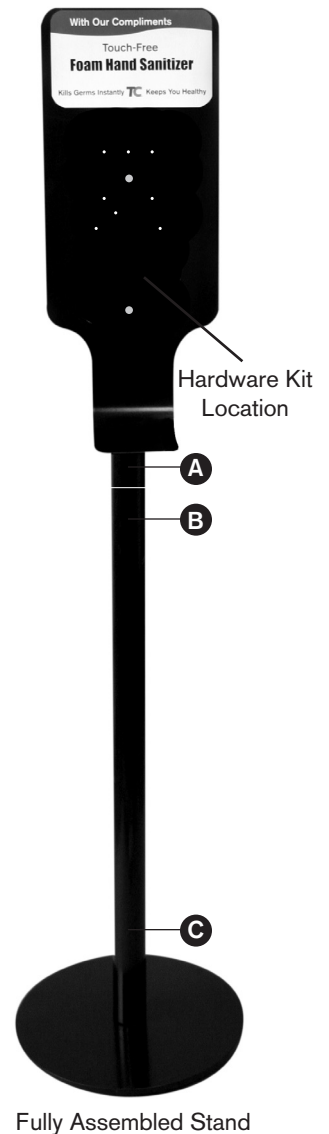

technical concepts
Innovative Hygiene Solutions

World Headquarters:
Serving North and South America

Technical Concepts LLC
1301 Allanson Road
Mundelein, Illinois 60060 U.S.A.
Toll Free: 1-800-551-5155
Fax: 1-800-551-5046

www.technicalconcepts.com

European Headquarters:
Serving Europe, Africa and Middle East

Technical Concepts International Ltd.
Peterborough, PE2 6WA, England
Phone: +44 (0)870 568 6824

Asian Headquarters:
Serving Asia and Pacific

Technical Concepts Asia
No. 887, Jalan Perindustrian Bukit
Minyak, Bukit Minyak
14100, Penang, Malaysia
Phone: (60) 4 508 5008

